



Model: NERO 50CTI  
Engine

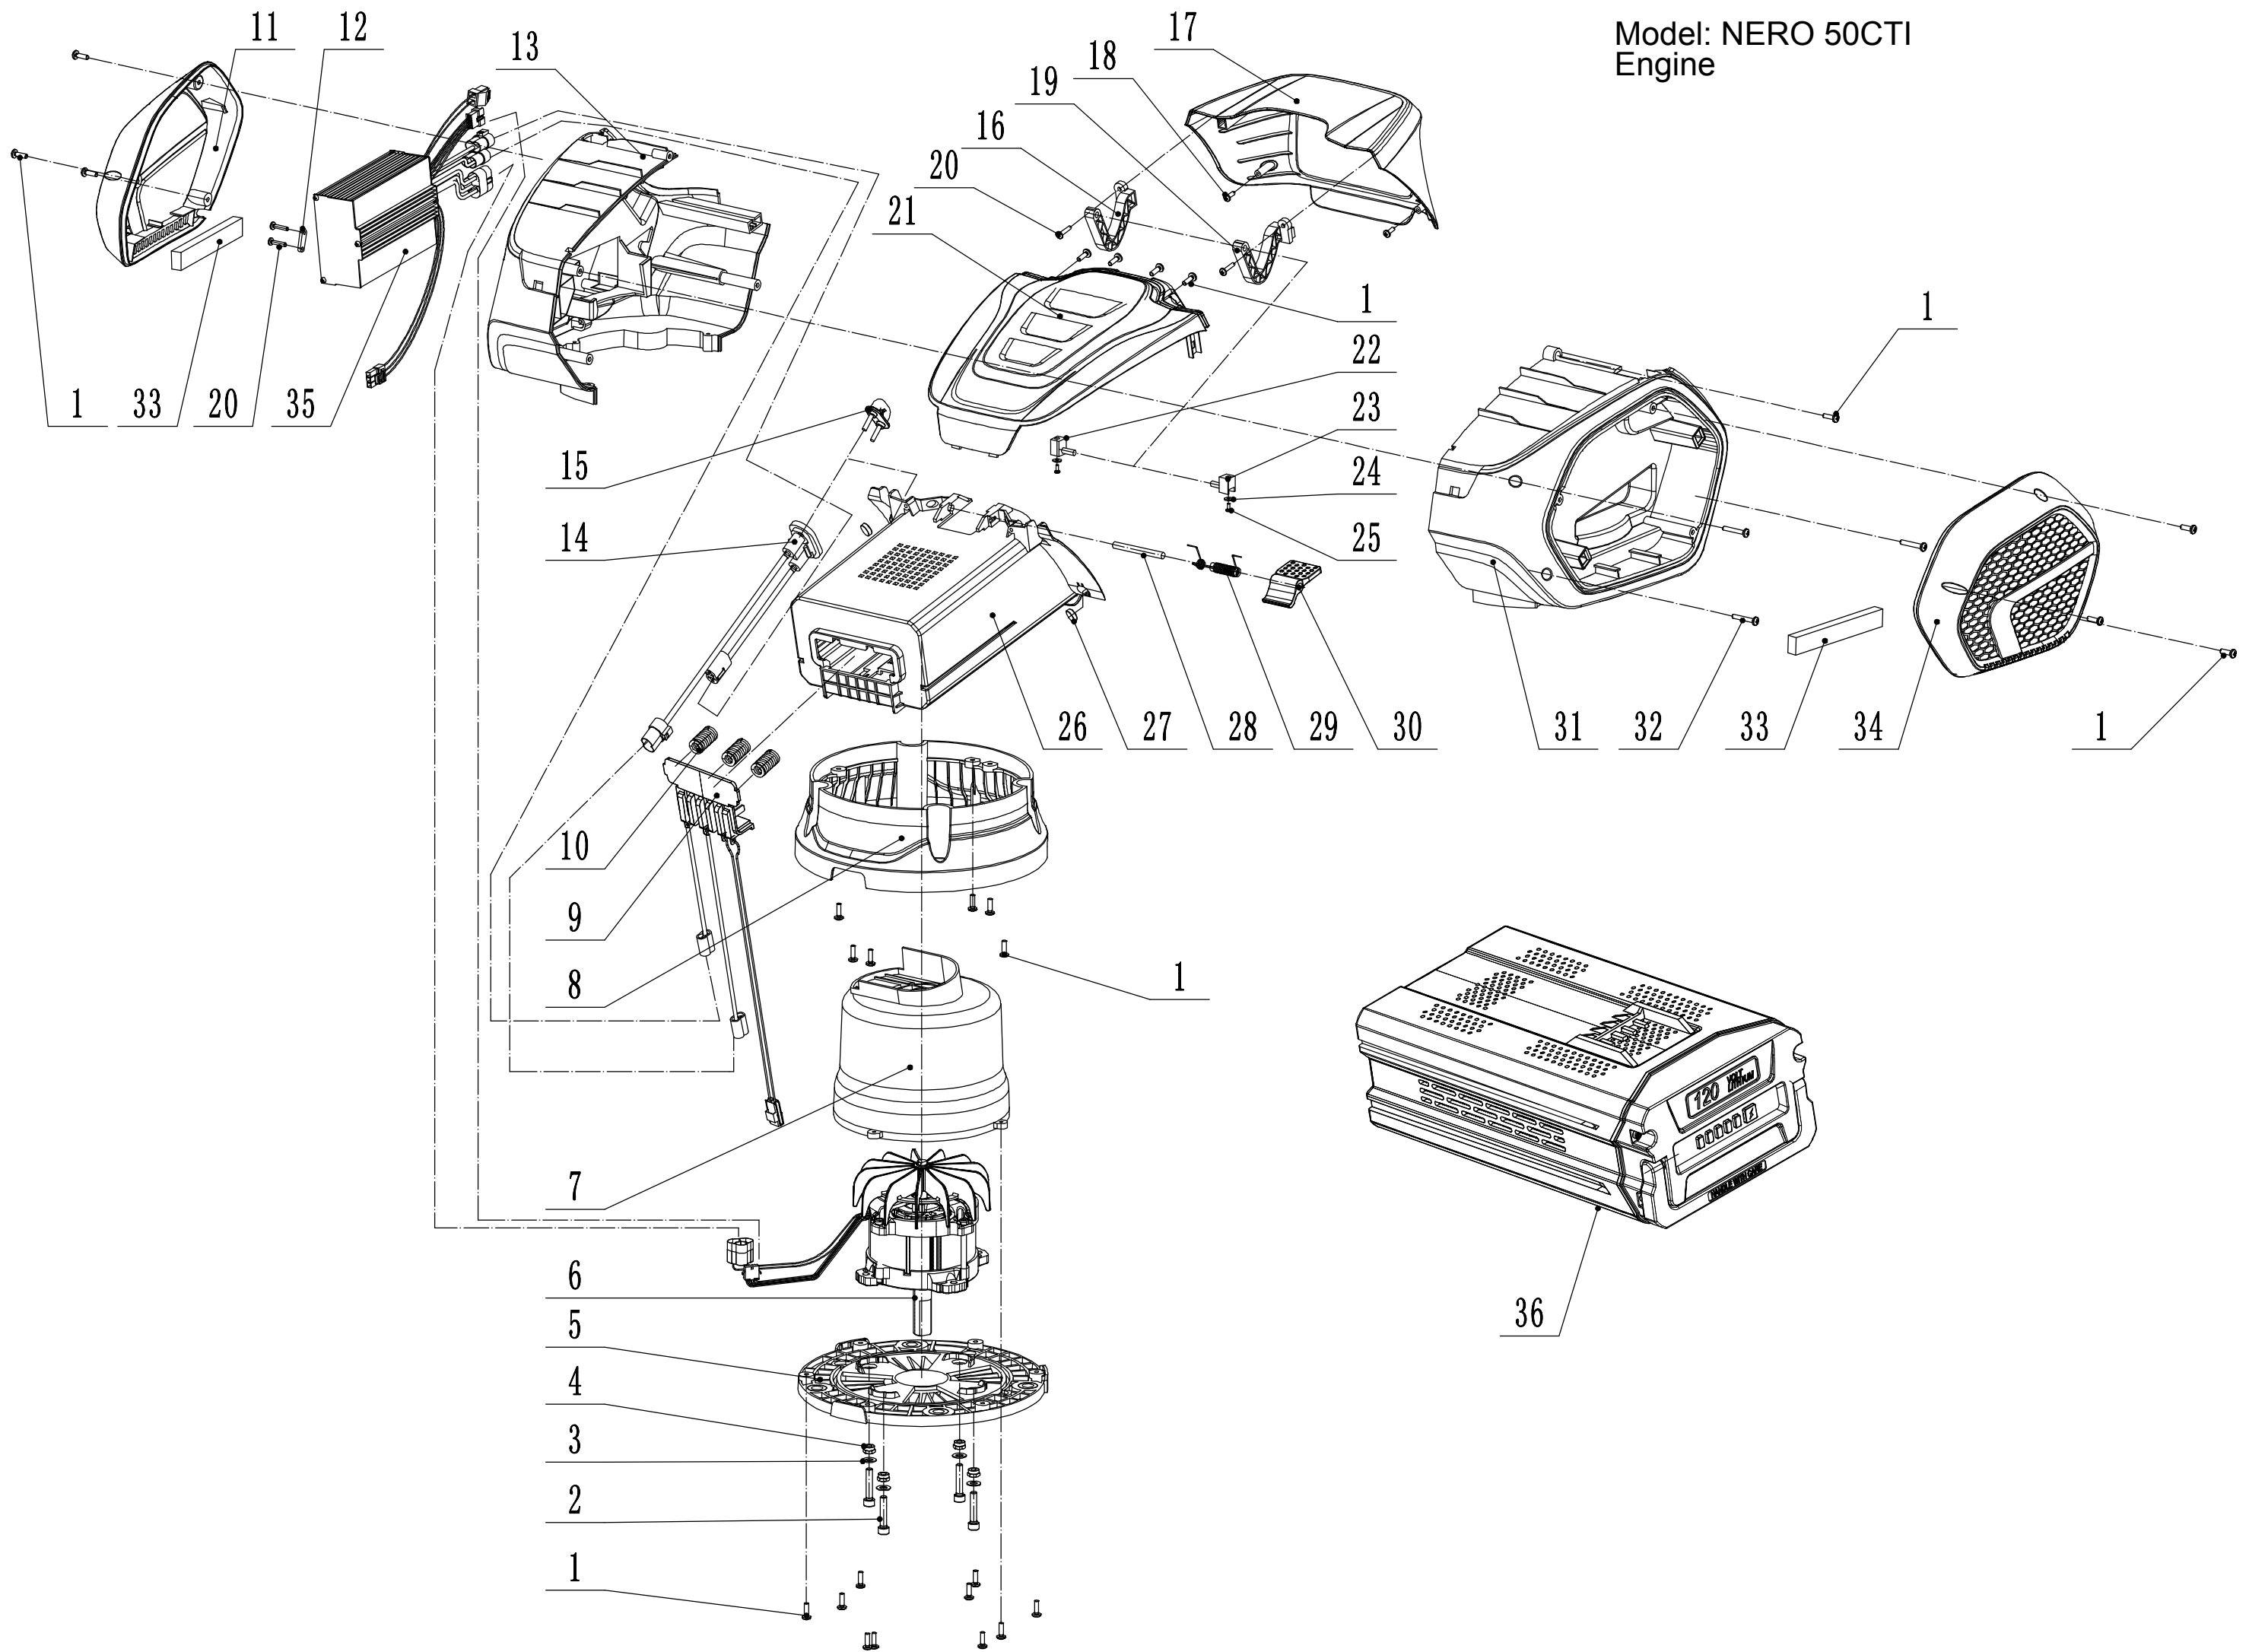


<b>Engine Spare parts</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U50I-00001	Screw - M4*14	27
2	U50I-00002	Bolt - M6*30	4
3	U455-00054	Flat washer - M6	4
4	U455-00013	Nut - M6	4
5	U50I-00003	Motor base	1
6	U50I-00004	Motor	1
7	U50I-00005	Wind shield	1
8	U50I-00006	Motor barrel	1
9	U50I-00007	Battery lead plate	1
10	U50I-00008	Battery pressure spring	3
11	U50I-00009	Left cover	1
12	U50I-00010	Cable Bracket	1
13	U50I-00011	Left shell	1
14	U50I-00012	Electrified base assembly	1
15	U50I-00013	Key	1
16	U50I-00014	Battery cover flip piece B	1
17	U50I-00015	Battery cover	1
18	U50I-00016	Screw - M4*6	2
19	U50I-00017	Battery cover flip piece A	1
20	U50I-00018	Screw - M3.5*15	4
21	U50I-00019	Upper cover	1
22	U50I-00020	The central axis B	1
23	U50I-00021	The central axis A	1
24	UV160-00036	Flat washer - M6	2
25	U50I-00022	Screw - M2.5*6	2
26	U50I-00023	Battery compartment	1
27	U50I-00024	Magnet - M12*5	2
28	U50I-00025	Battery buckle shaft	1
29	U50I-00026	Battery buckle torsion spring	1
30	U50I-00027	Battery buckle	1
31	U50I-00028	Right shell	1
32	U50I-00029	Screw - M4*26	3
33	U50I-00030	Filter sponge	2
34	U50I-00031	Right cover	1
35	U50I-00032	Controller	1
36	U50I-00033	Battery	1

Model: NERO 50CTI  
Main body

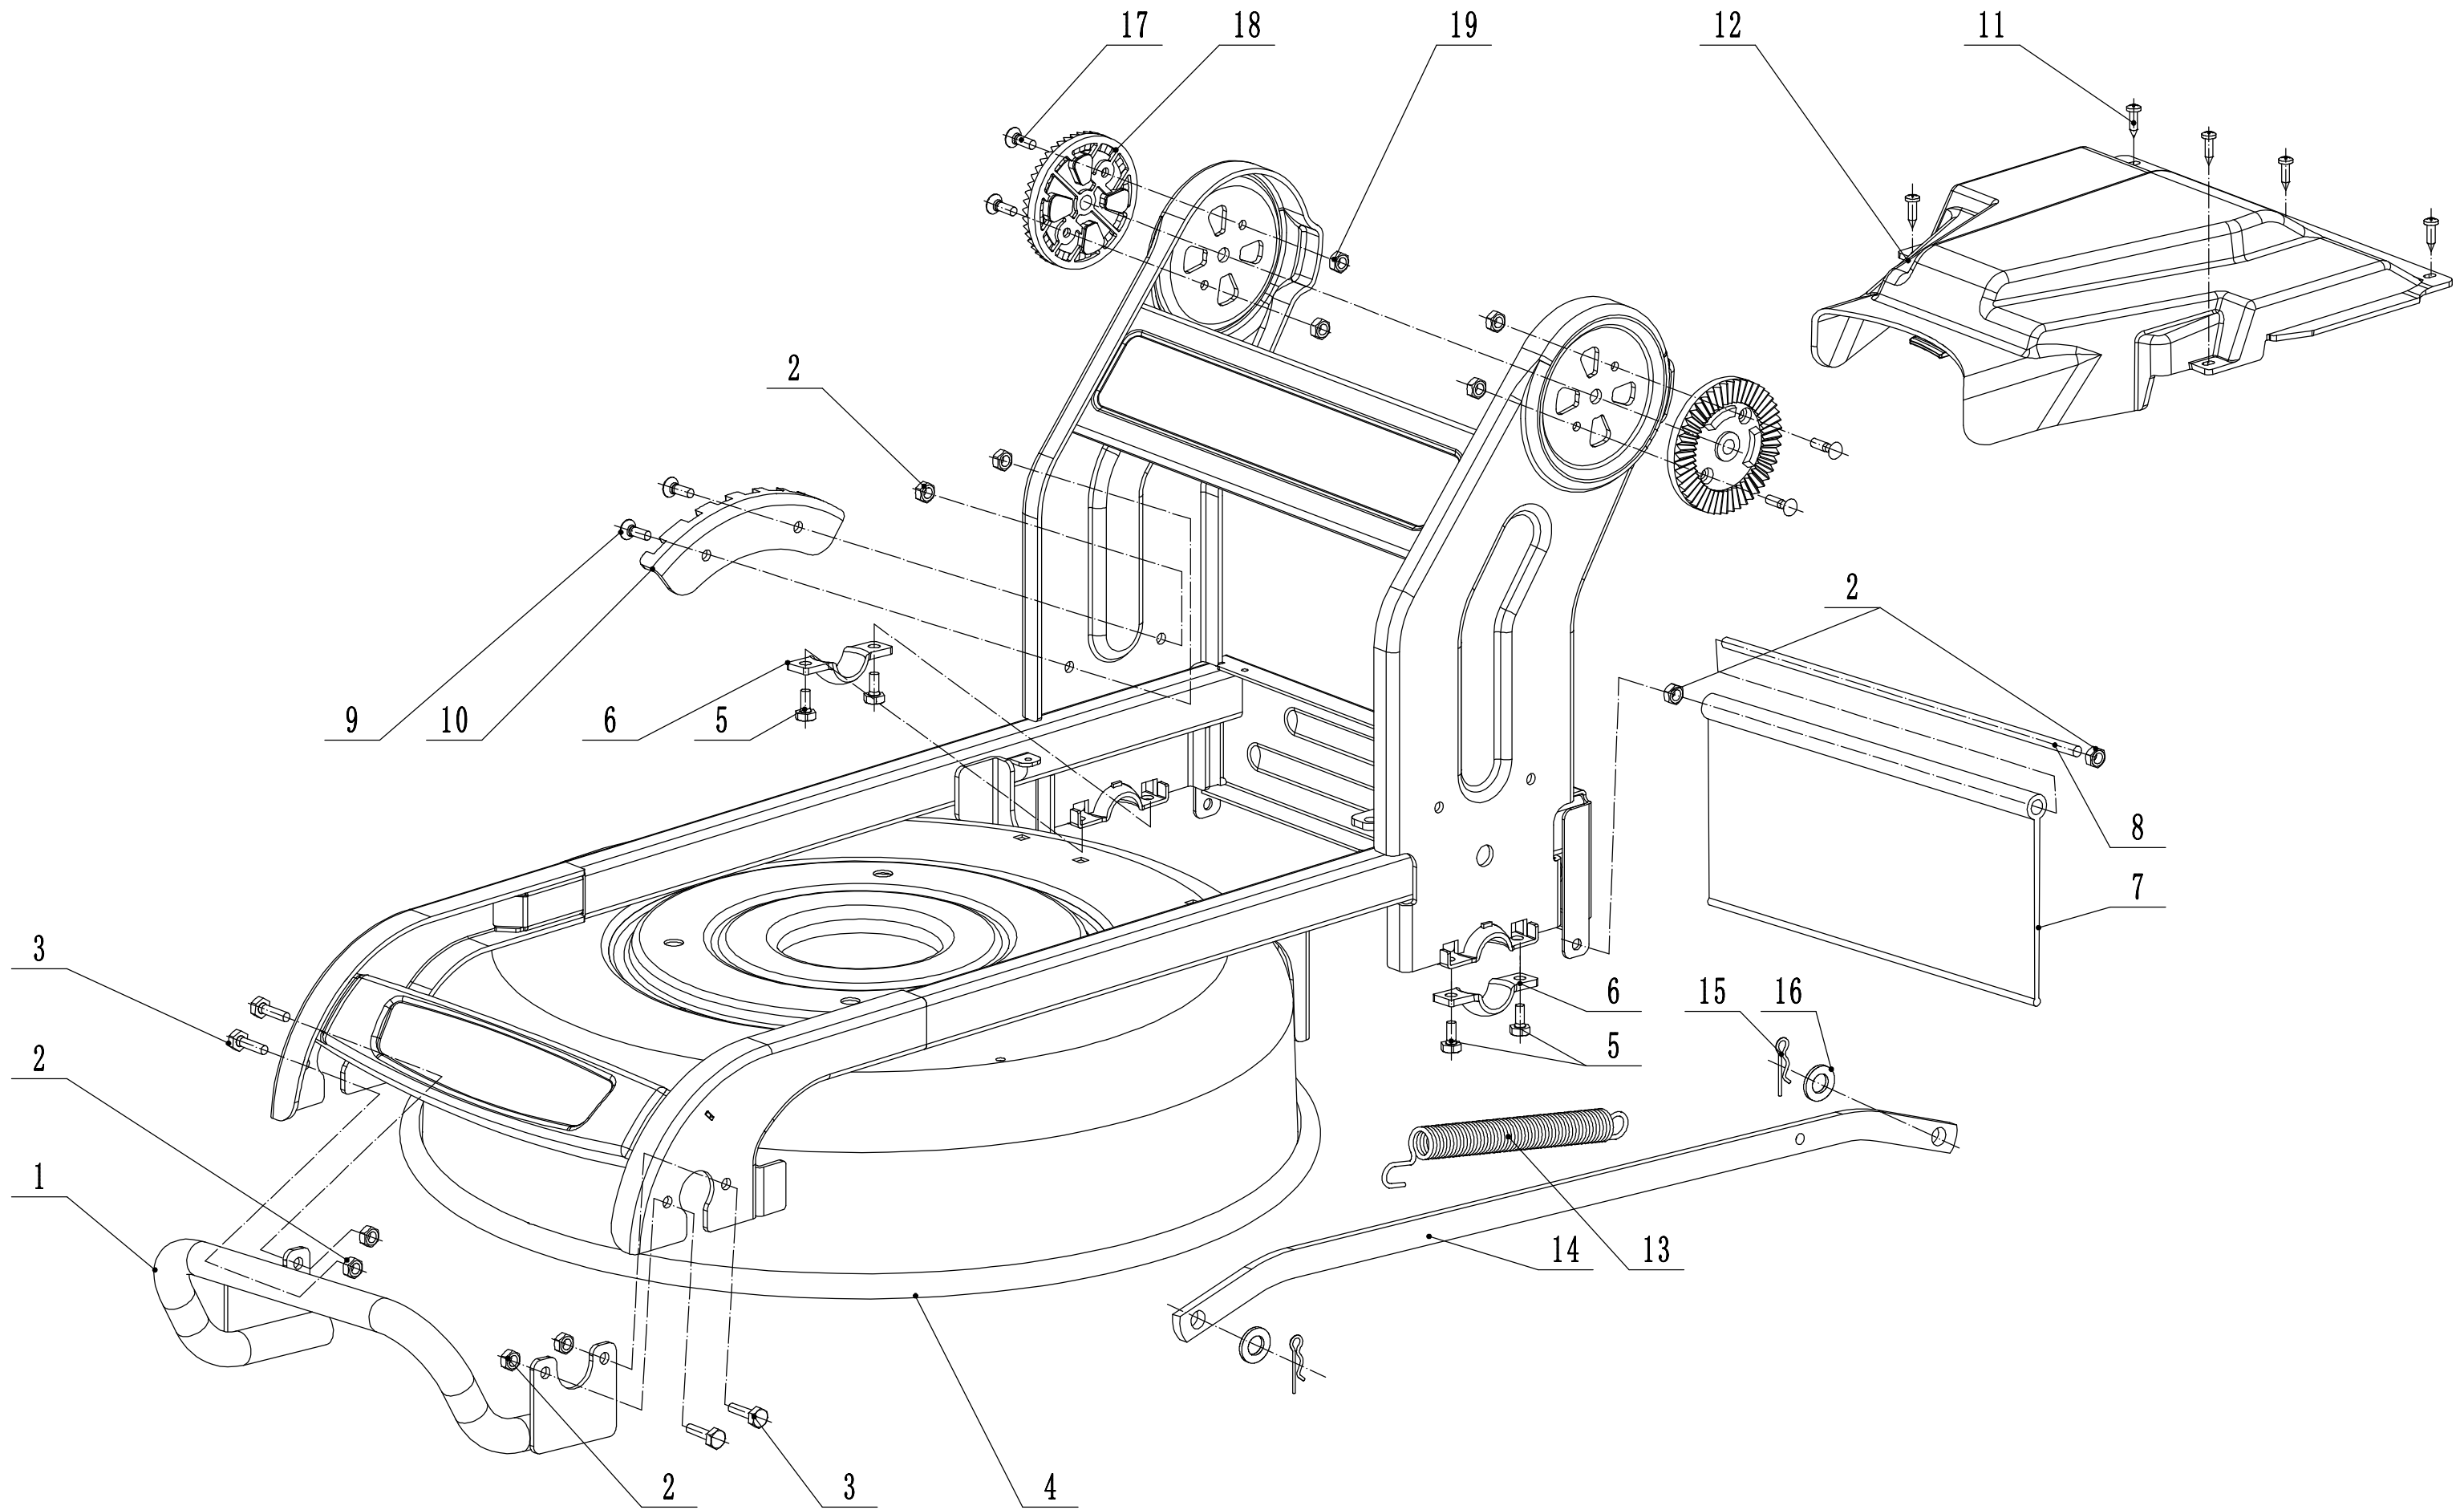


<b>main body</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U456-00019	Bumper	1
2	U455-00013	Lock Nut - M6	8
3	U456-00020	Bolt - M6x18	4
4	U456-00021	Chassis	1
5	U455-00009	Bolt - M6x12	4
6	U455-00021	Bearing Holder	2
7	U456-00022	Trailing Flap	1
8	U456-00023	Pivot - Trailing Flap	1
9	U455-00011	Screw - M6x16	2
10	U456-00024	Graduator	1
11	U456-00025	Screw - ST4.2x10	5
12	U456-00026	Shield	1
13	U456-00027	Spring	1
14	U456-00028	Connecting Rod	1
15	U455-00032	Check Ring	2
16	U455-00029	Washer - M10	2
17	U455-00003	Screw - M5x12	4
18	U455-00004	Teeth Disc	2
19	U455-00006	Lock Nut - M5	4

Model: NERO 50CTI  
Blade system

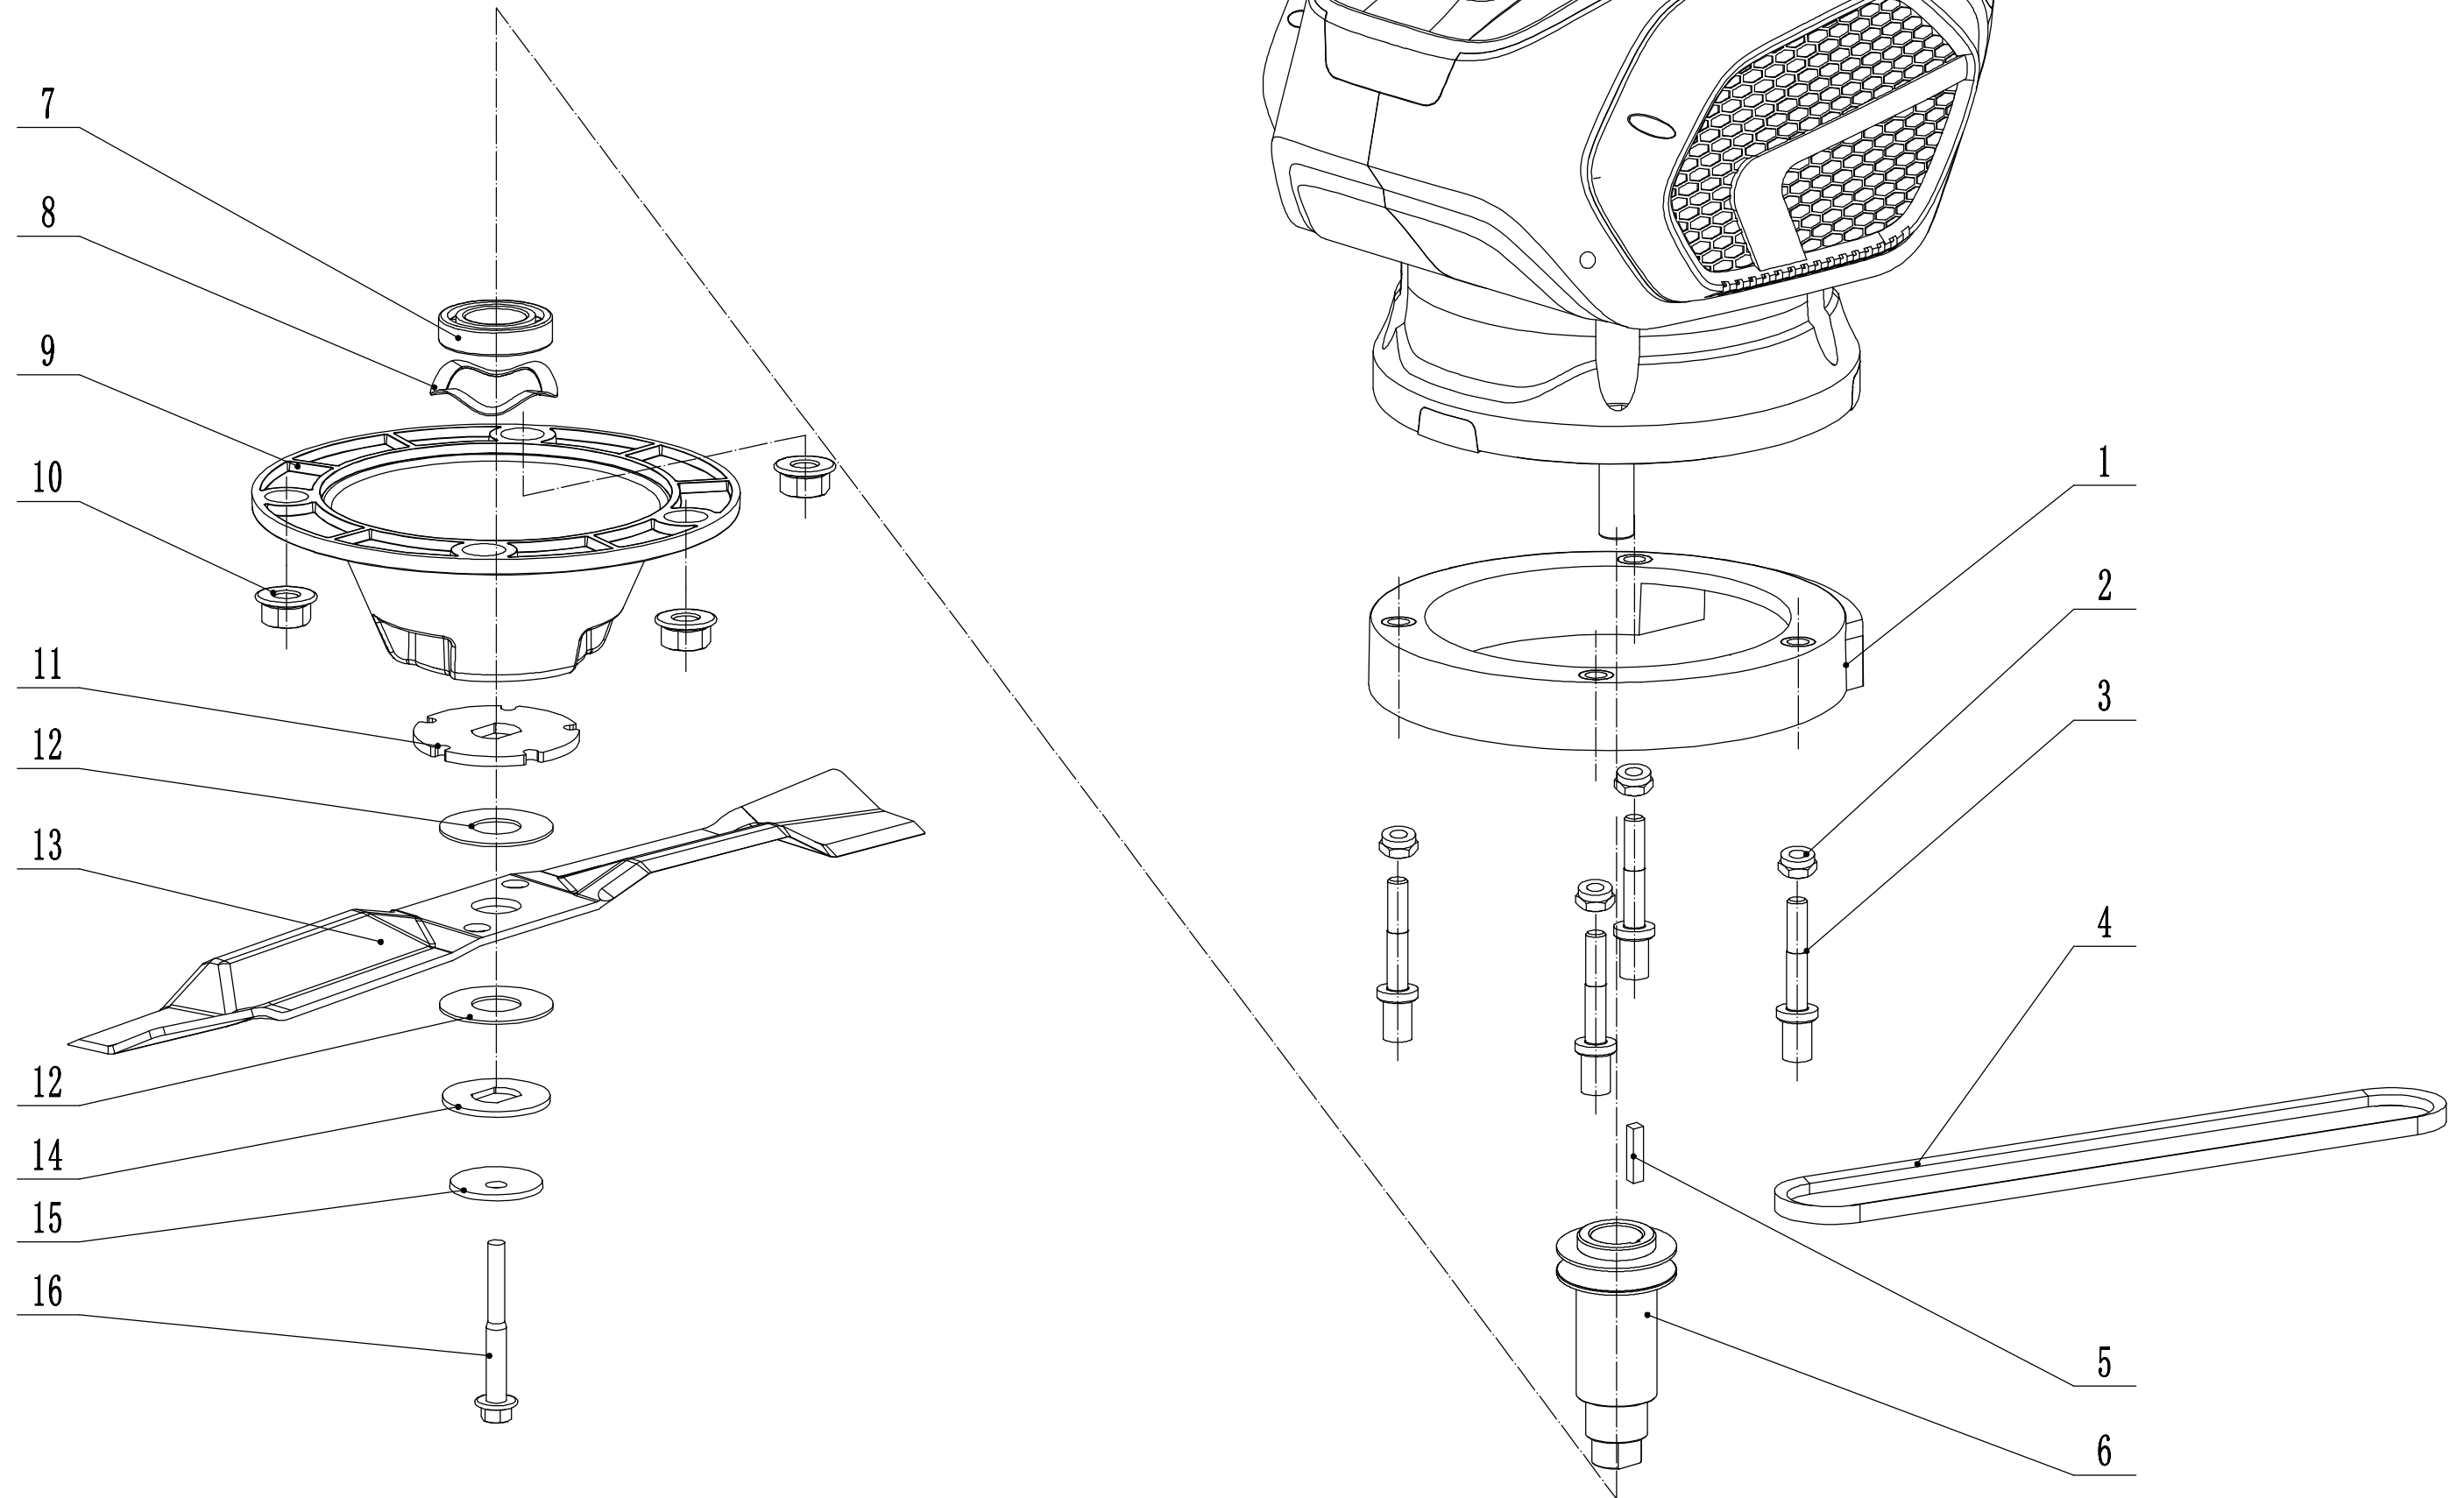

<b>blade system</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U456-00029	engine base	1
2	UZT85-00002	nut	4
3	U50I-00035	bolt	4
4	U455-00042	belt- V10x780	1
5	U50I-00036	key	1
6	U50I-00037	adapter	1
7	U466-00006	bearing	1
8	U456-00033	spring washer	1
9	U456-00034	bracket	1
10	U456-00035	lock nut-M14	3
11	U466-00007	spacer	1
12	U466-00008	spacer	2
13	U466-00009	blade	1
14	U466-00010	spacer	1
15	U456-00038	spring washer	1
16	U50I-00038	bolt	1


Model: NERO 50CTI  
Front axle

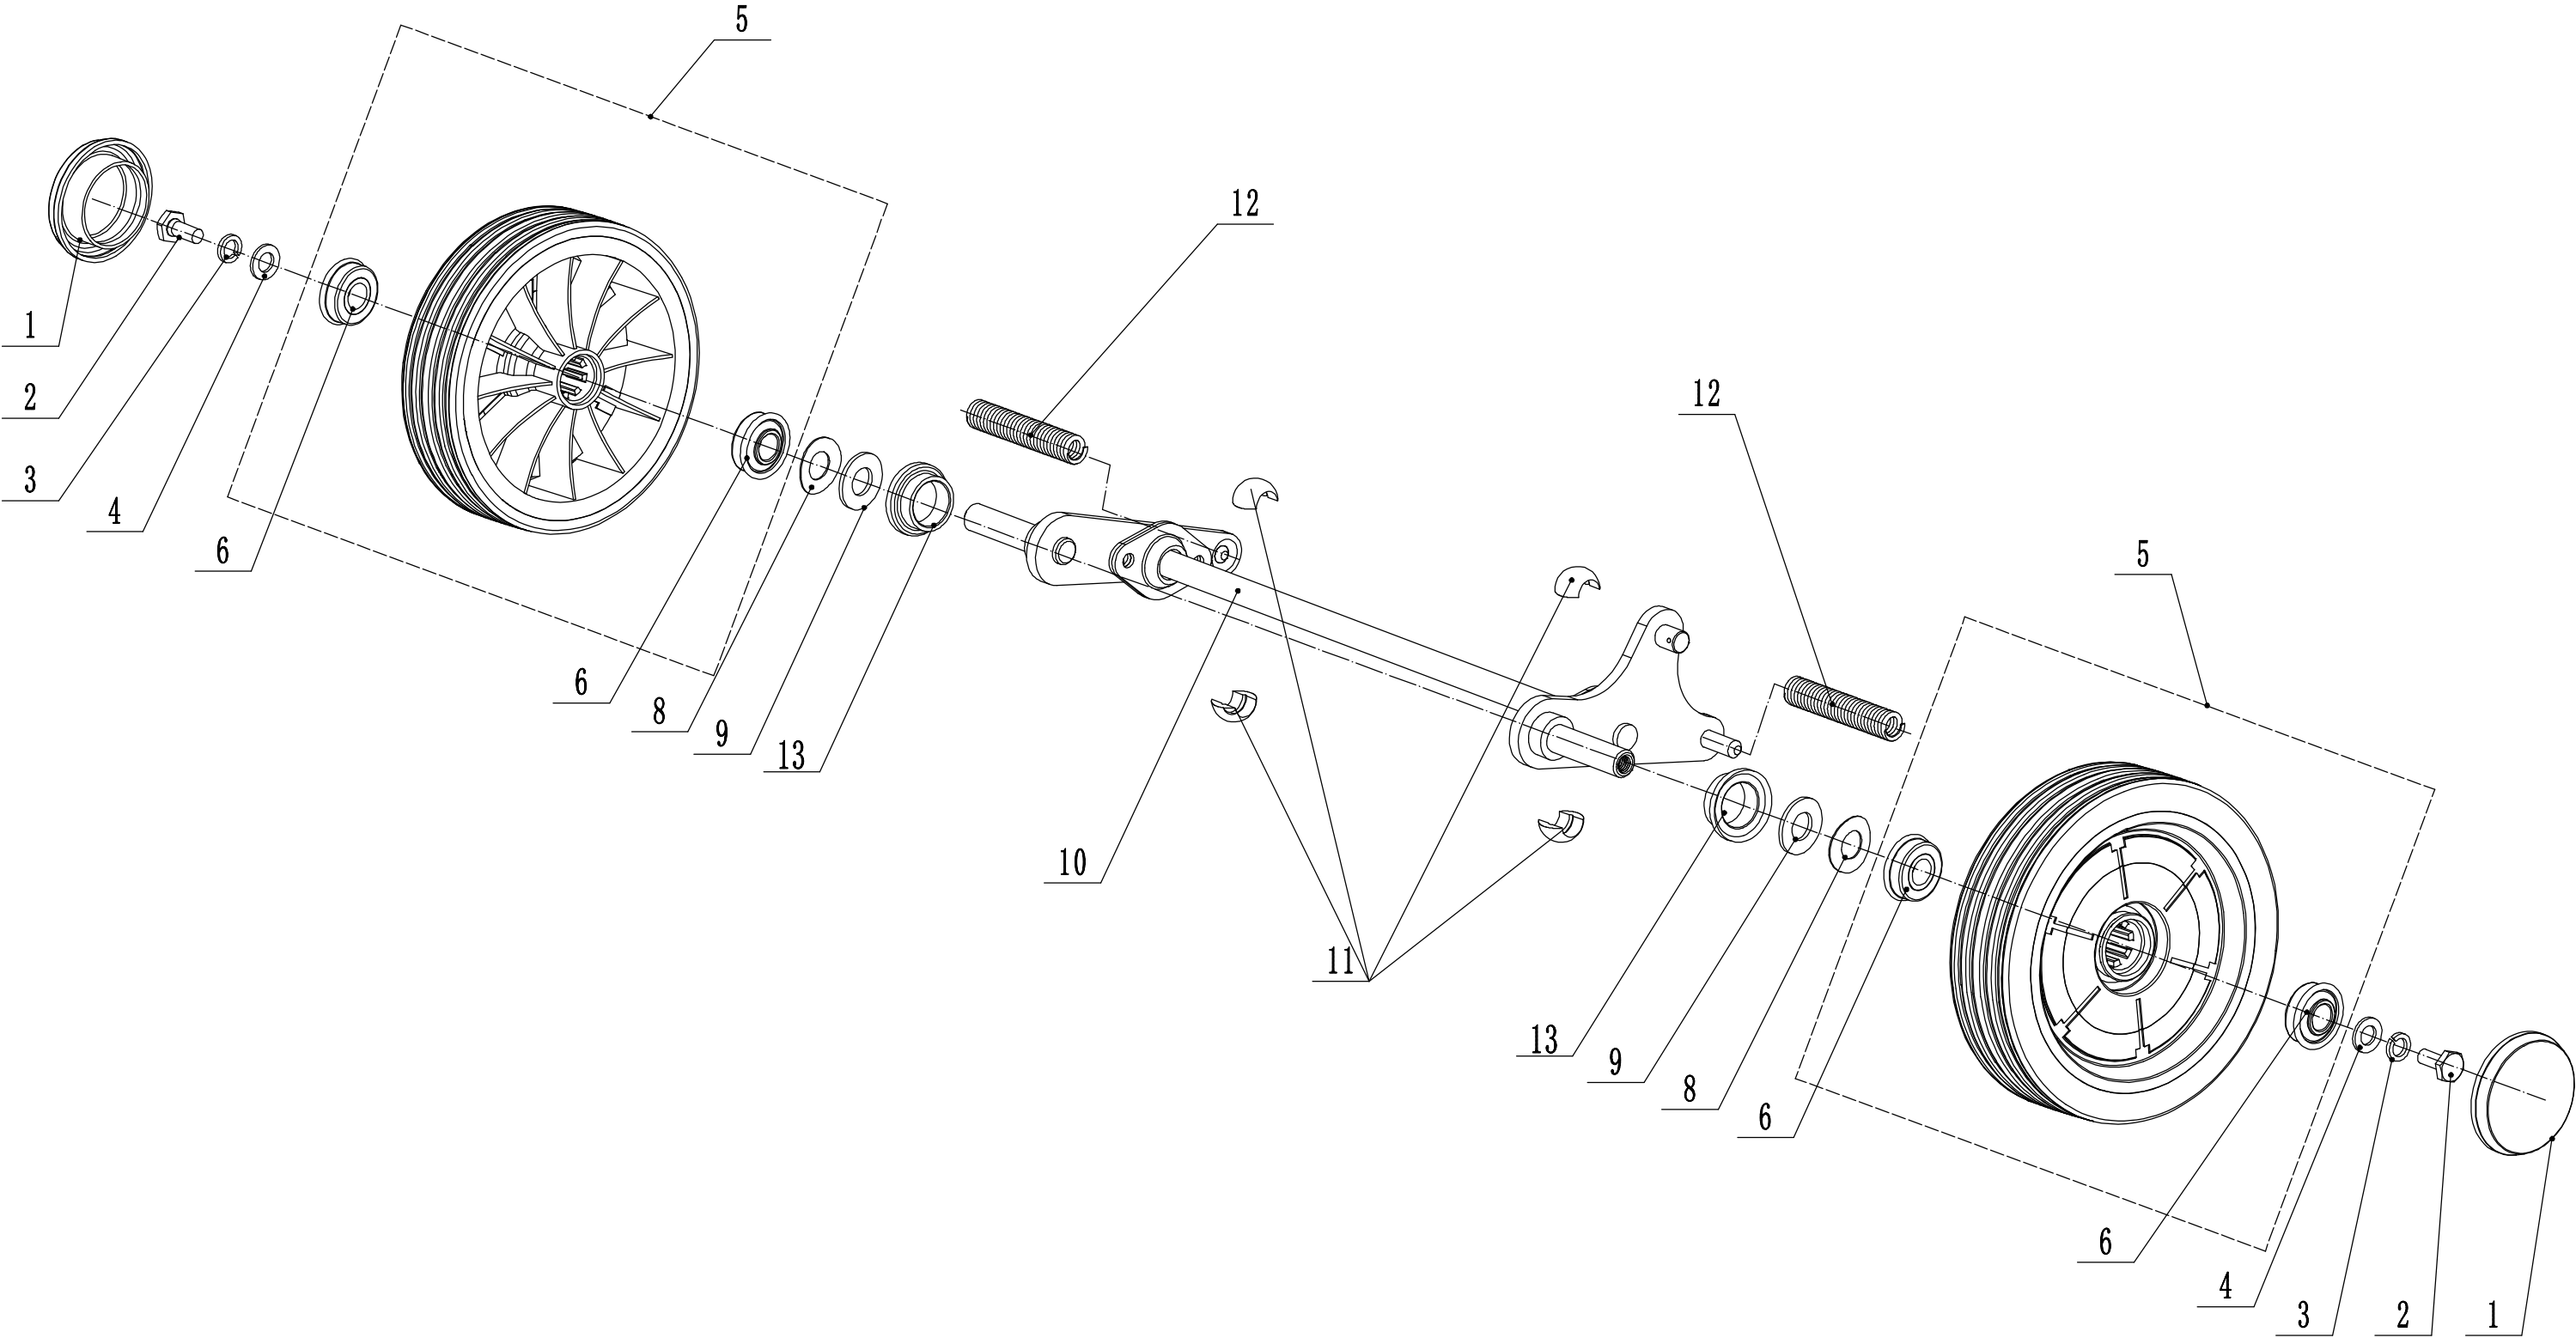

<b>front axle</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U466-00012	Wheel Cap	2
2	U455-00002	Bolt - M8x16	2
3	U455-00053	Spring washer-M8	2
4	U455-00061	Washer - M8	2
5	U466-00013	wheel	2
6	U455-00056	bearing	4
8	U455-00057	spring washer	2
9	U455-00058	spacer	2
10	U456-00040	front axle	1
11	U455-00059	Axle Bearing - Half	4
12	U456-00041	scraper	2
13	U50I-00039	waterproof ring	2




Model: NERO 50CTI  
Front axle

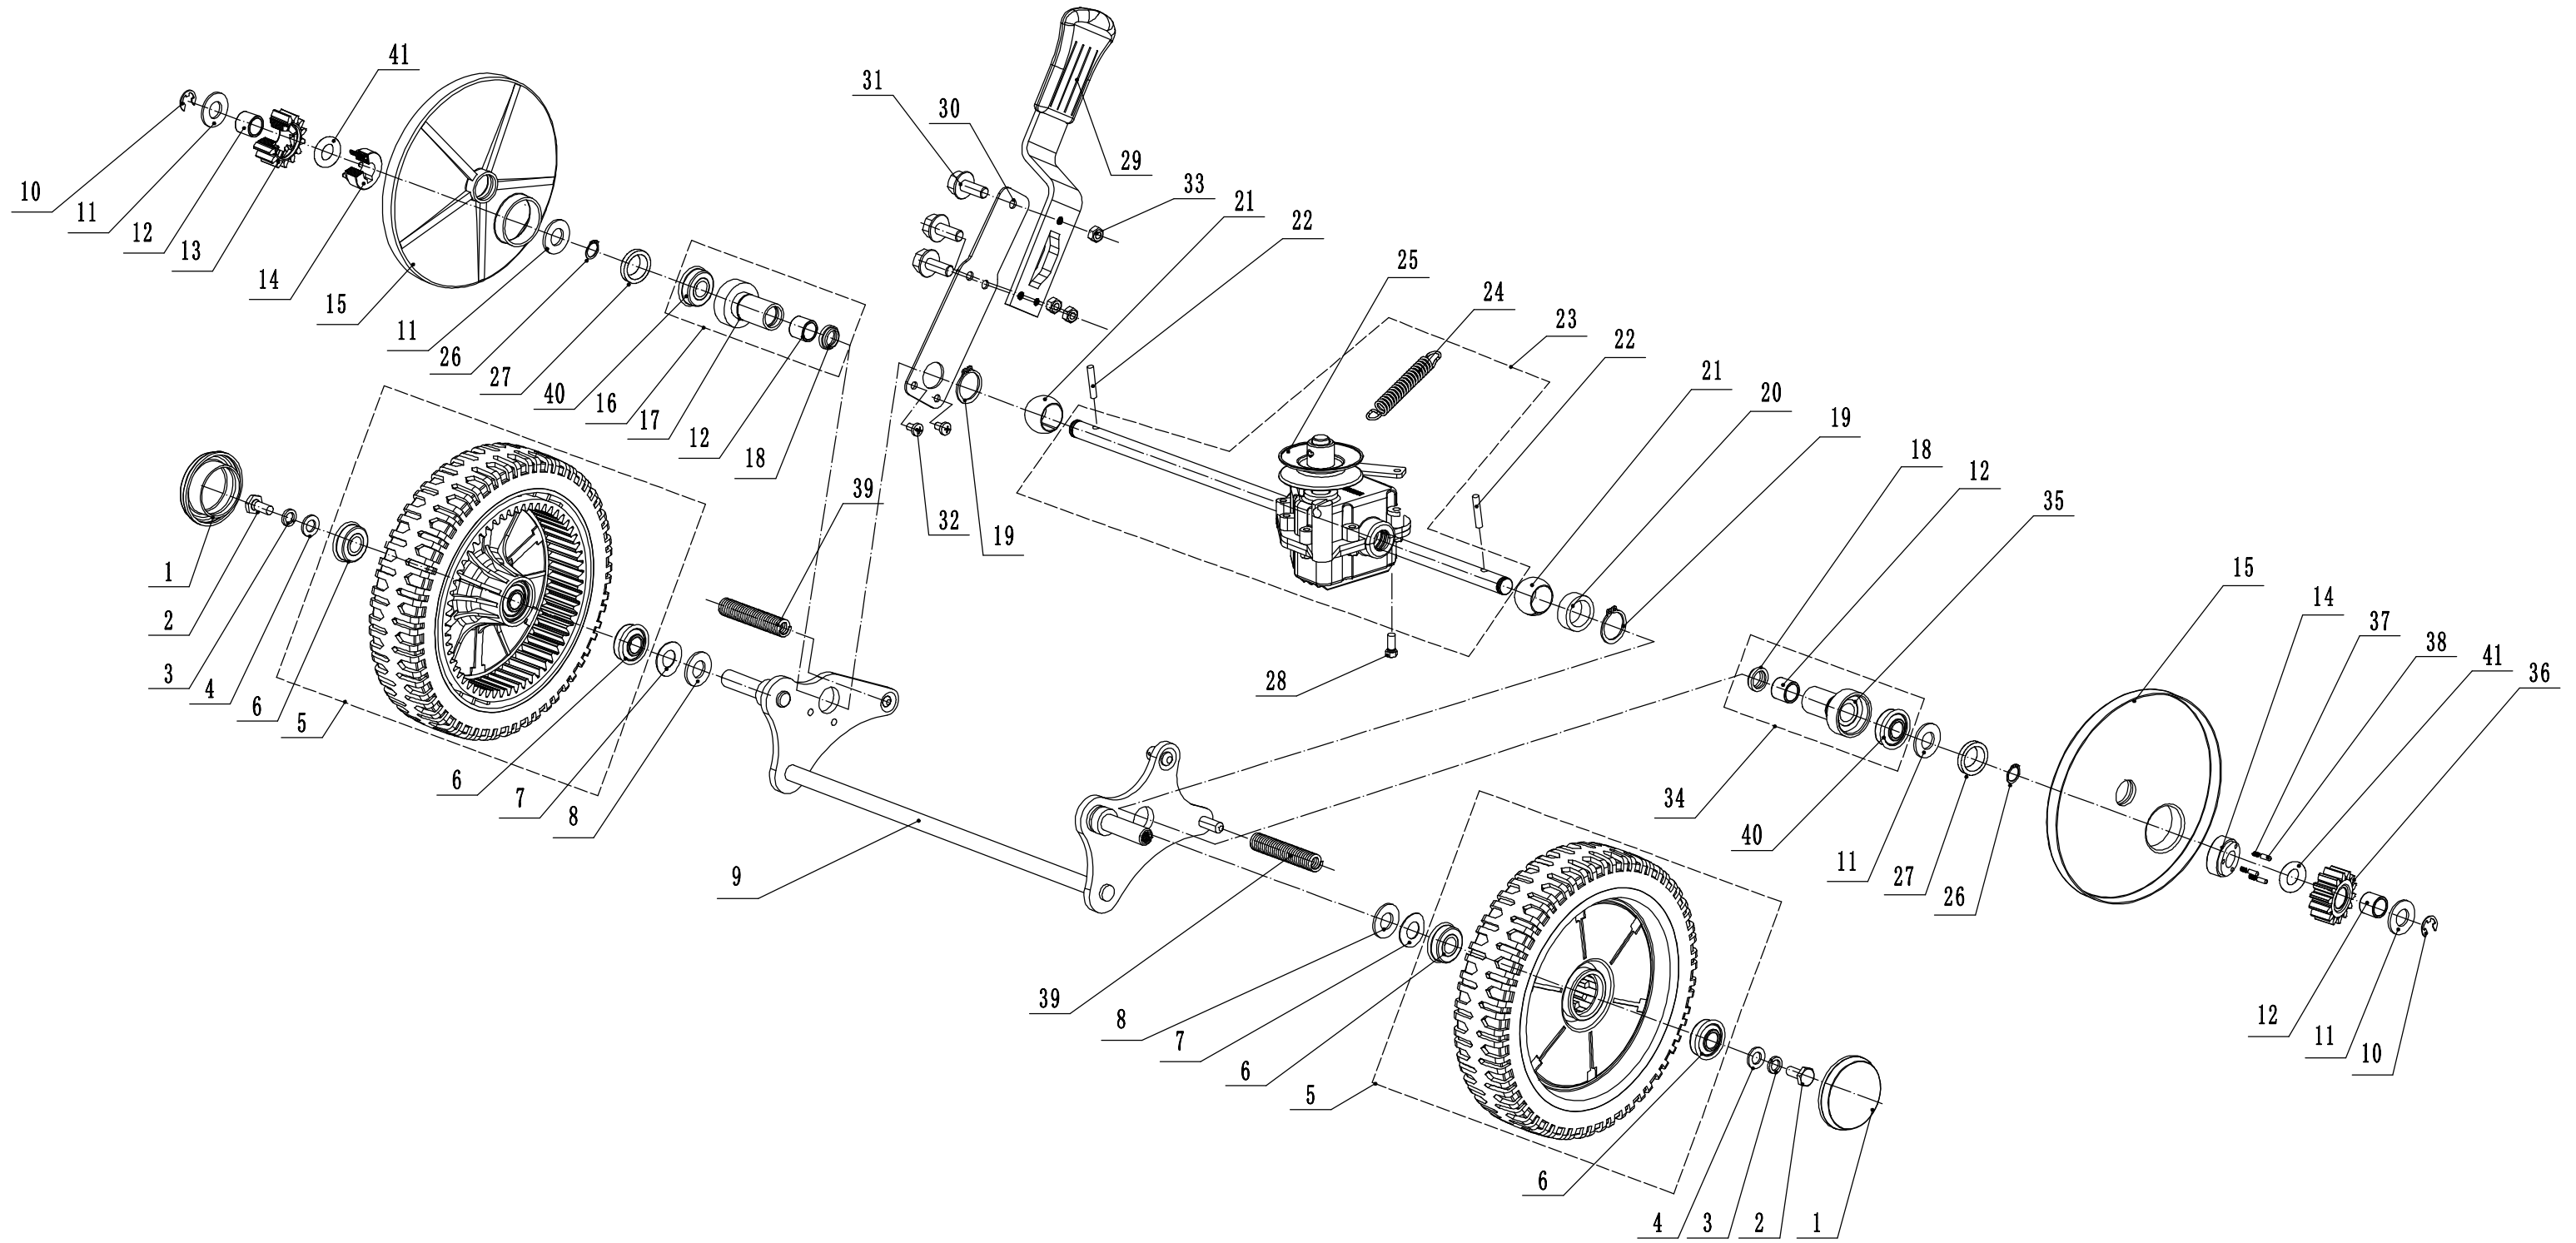


rear exle			
n	art	name	qty
1	U455-00114	Wheel Cap	2
2	U455-00002	Bolt - M8x16	2
3	U455-00053	Spring Washer - M8	2
4	U455-00061	Washer - M8	2
5	U456-00042	Rear Wheel - 9"	2
6	U455-00056	Bearing	4
7	U455-00057	Spacer	2
8	U455-00058	Washer	2
9	U456-00043	Rear Axle	1
10	U455-00085	E-Clip - M9	2
11	U455-00084	Spacer	4
12	U455-00076	Bearing	4
13	U455-00082	Drive Pinion - R/H	1
14	U455-00079	Ratchet	2
15	U456-00044	Dustproof Shield	2
16	U455-00073	Right Bearing Sheath Assembly	1
17	U456-00046	Right Bearing Sheath	1
18	U455-00075	Dust Seal	2
19	U455-00068	Circlip - M20	2
20	U537-00035	Rear Transmission Partition	1
21	U455-00066	Spherical Bearing	2
22	U455-00078	Check Holder	2
23	U456-00047	Transmission Assembly	1
24	U455-00088	Spring	1
25	U456-00048	Pulley	1
26	U455-00077	Circlip - M12	2
27	U456-00009	Spacer	2
28	UG700-00055	Bolt - M6x20	2
29	U455-00071	Adjustment Lever	1
30	U455-00070	Spring Of Adjustment Lever	1
31	U456-00008	Bolt - M6x14	3
32	U456-00007	Screw - M5x8	2
33	U455-00013	Lock Nut - M6	3
34	U455-00074	Left Bearing Sheath Assembly	1
35	U456-00049	Right Bearing Sheath	1
36	U455-00083	Drive Pinion - L/H	1
37	U455-00080	Spring - Drive Pinion	6
38	U455-00081	Pin - Drive Pinion	6
39	U456-00041	Scraper	2
40	U456-00006	Bearing	2
41	U455-00089	O-ring	2

Model: NERO 50CTI  
Handle and controls

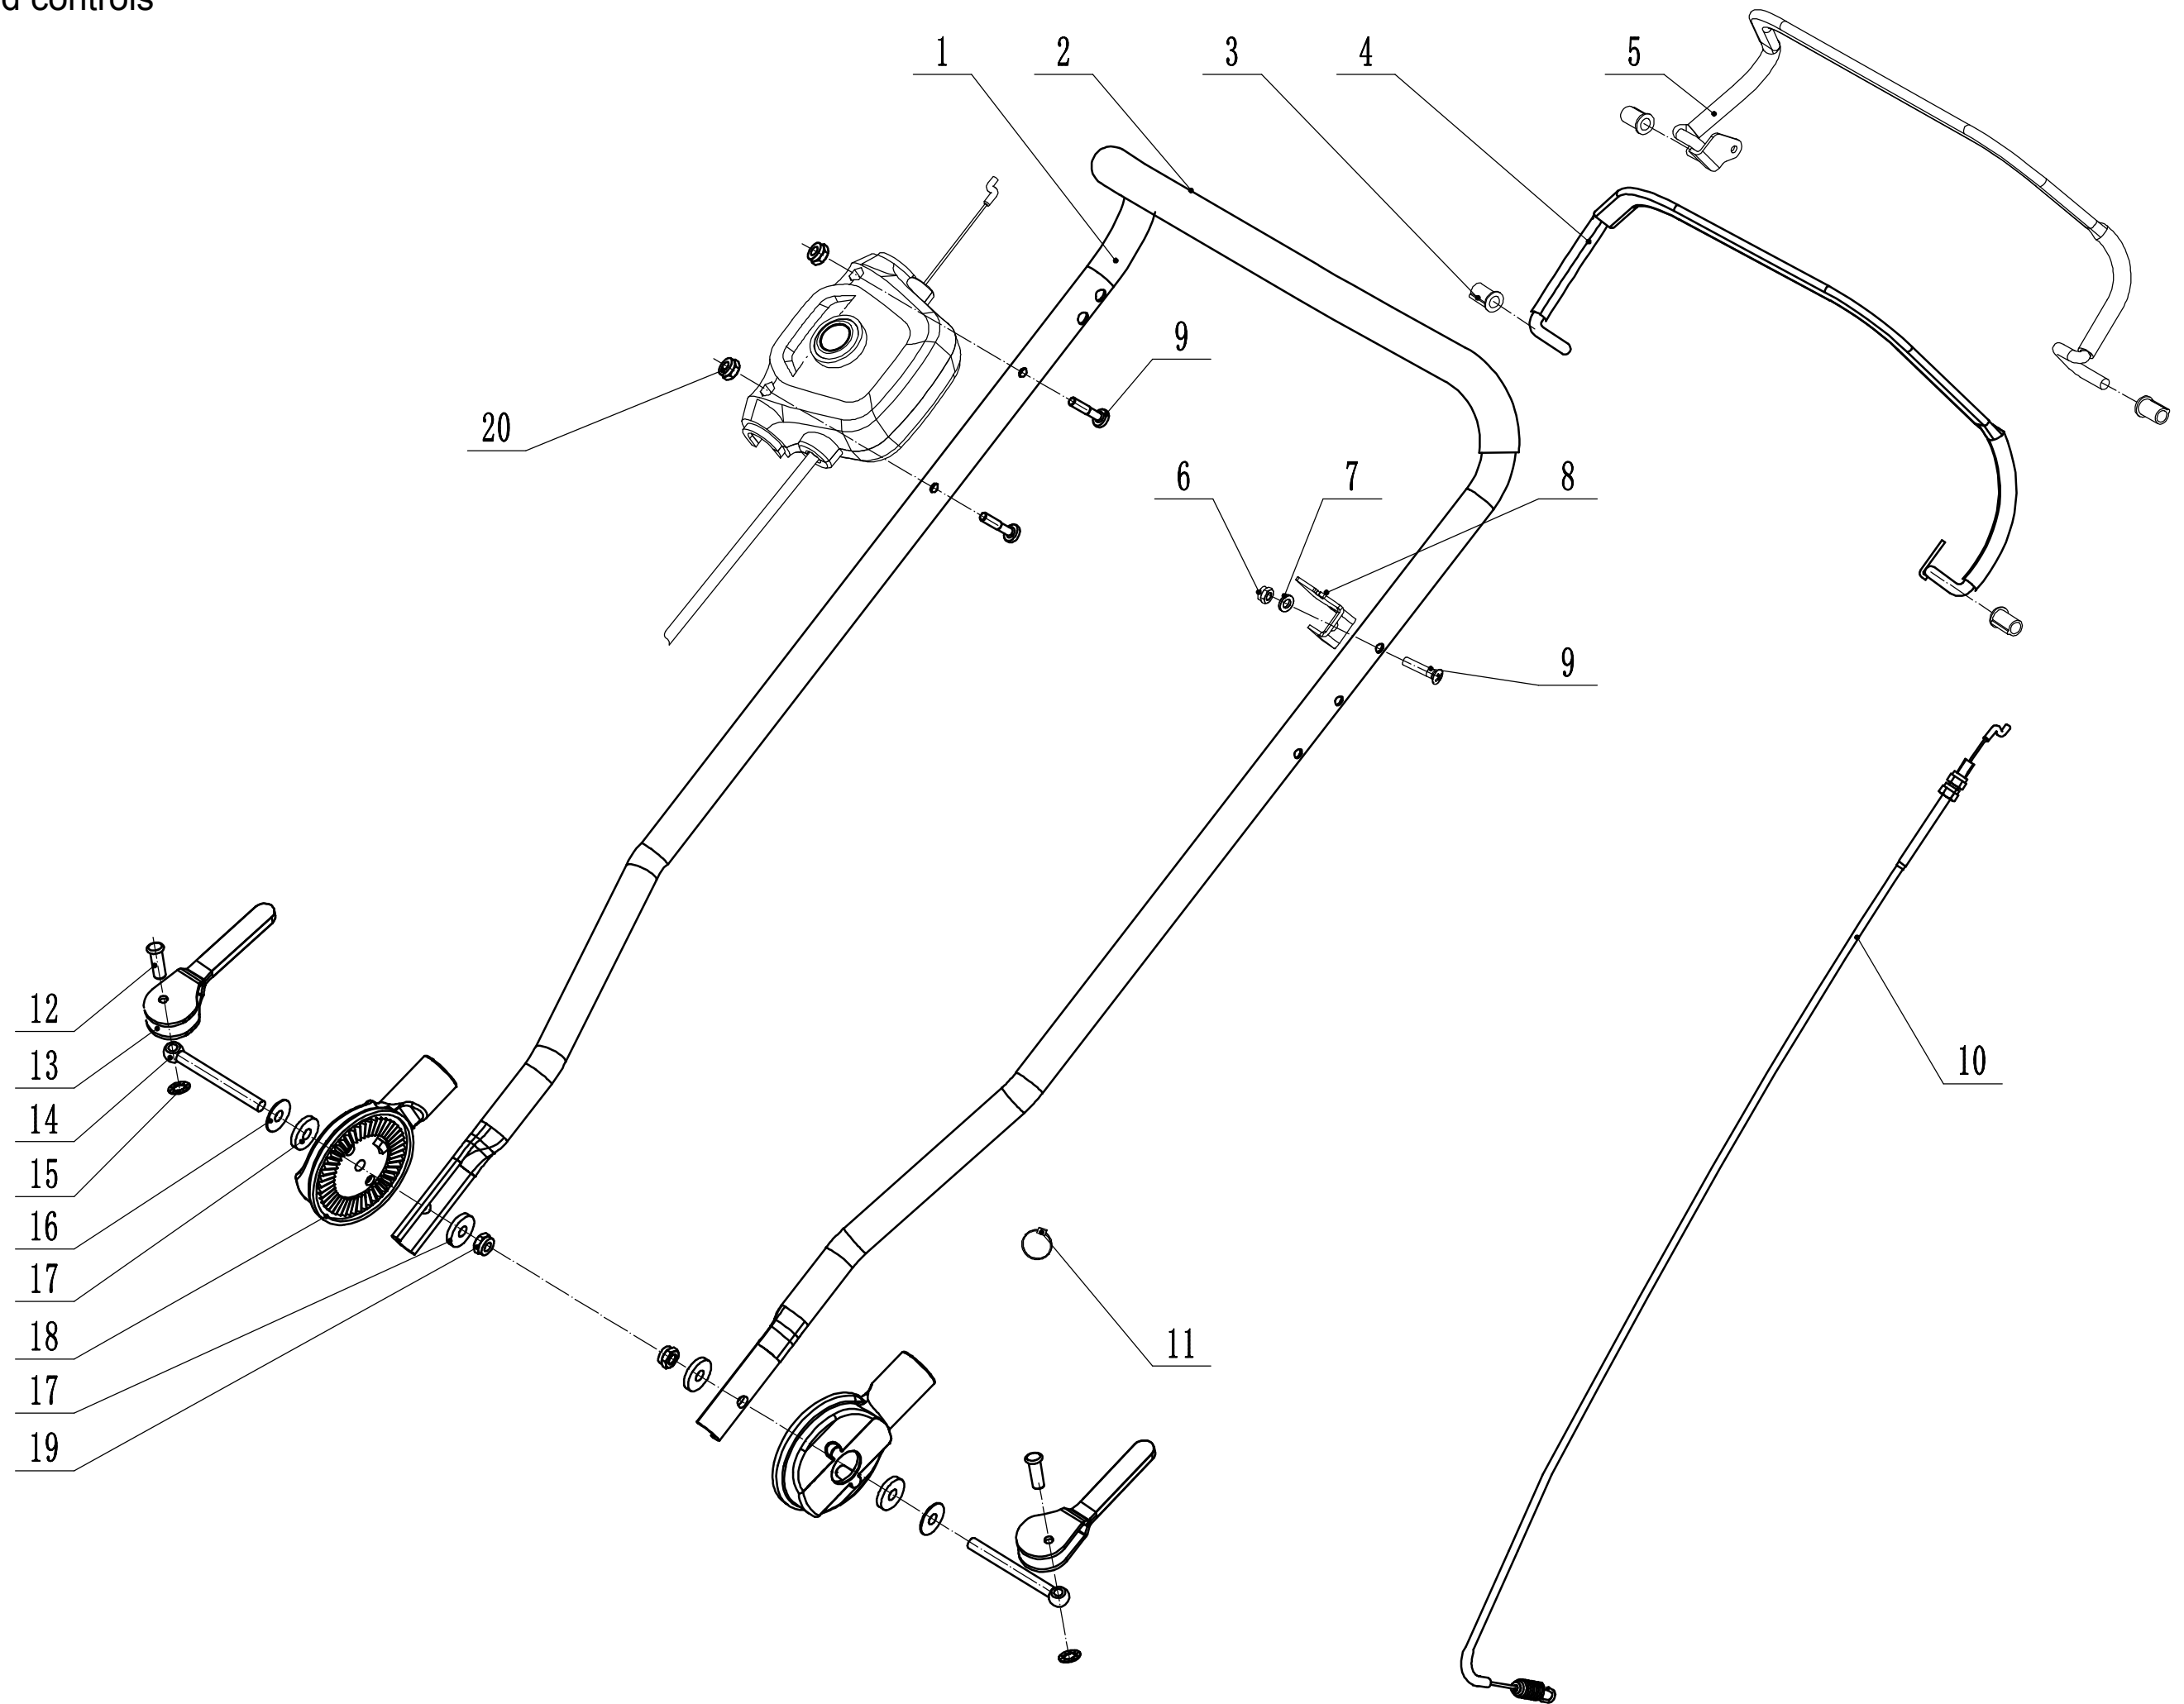

<b>handle and controls</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U50I-00040	Handle	1
2	U456-00011	Handle Sheath	1
3	U50I-00041	Plug	4
4	U50I-00042	Clutch Lever	1
5	U50I-00043	Opc Lever	1
6	U455-00013	Lock Nut - M6	1
7	U455-00054	Washer - M6	1
8	U455-00094	bracked	1
9	U455-00095	Screw - M6x40	3
10	U455-00097	Clutch Cable	1
11	U50I-00044	Nylon circlip	1
12	U455-00120	Axis Pin - 8x25	2
13	U455-00102	Lock Lever	2
14	U455-00101	Connecting Bolt	2
15	U455-00100	Fix Cap	2
16	U455-00104	Spacer	2
17	U455-00105	Spacer	4
18	U455-00106	Tooth Disc Kit	2
19	UAE55-00062	Lock Nut-M8	2
20	U50I-00045	Nut	2

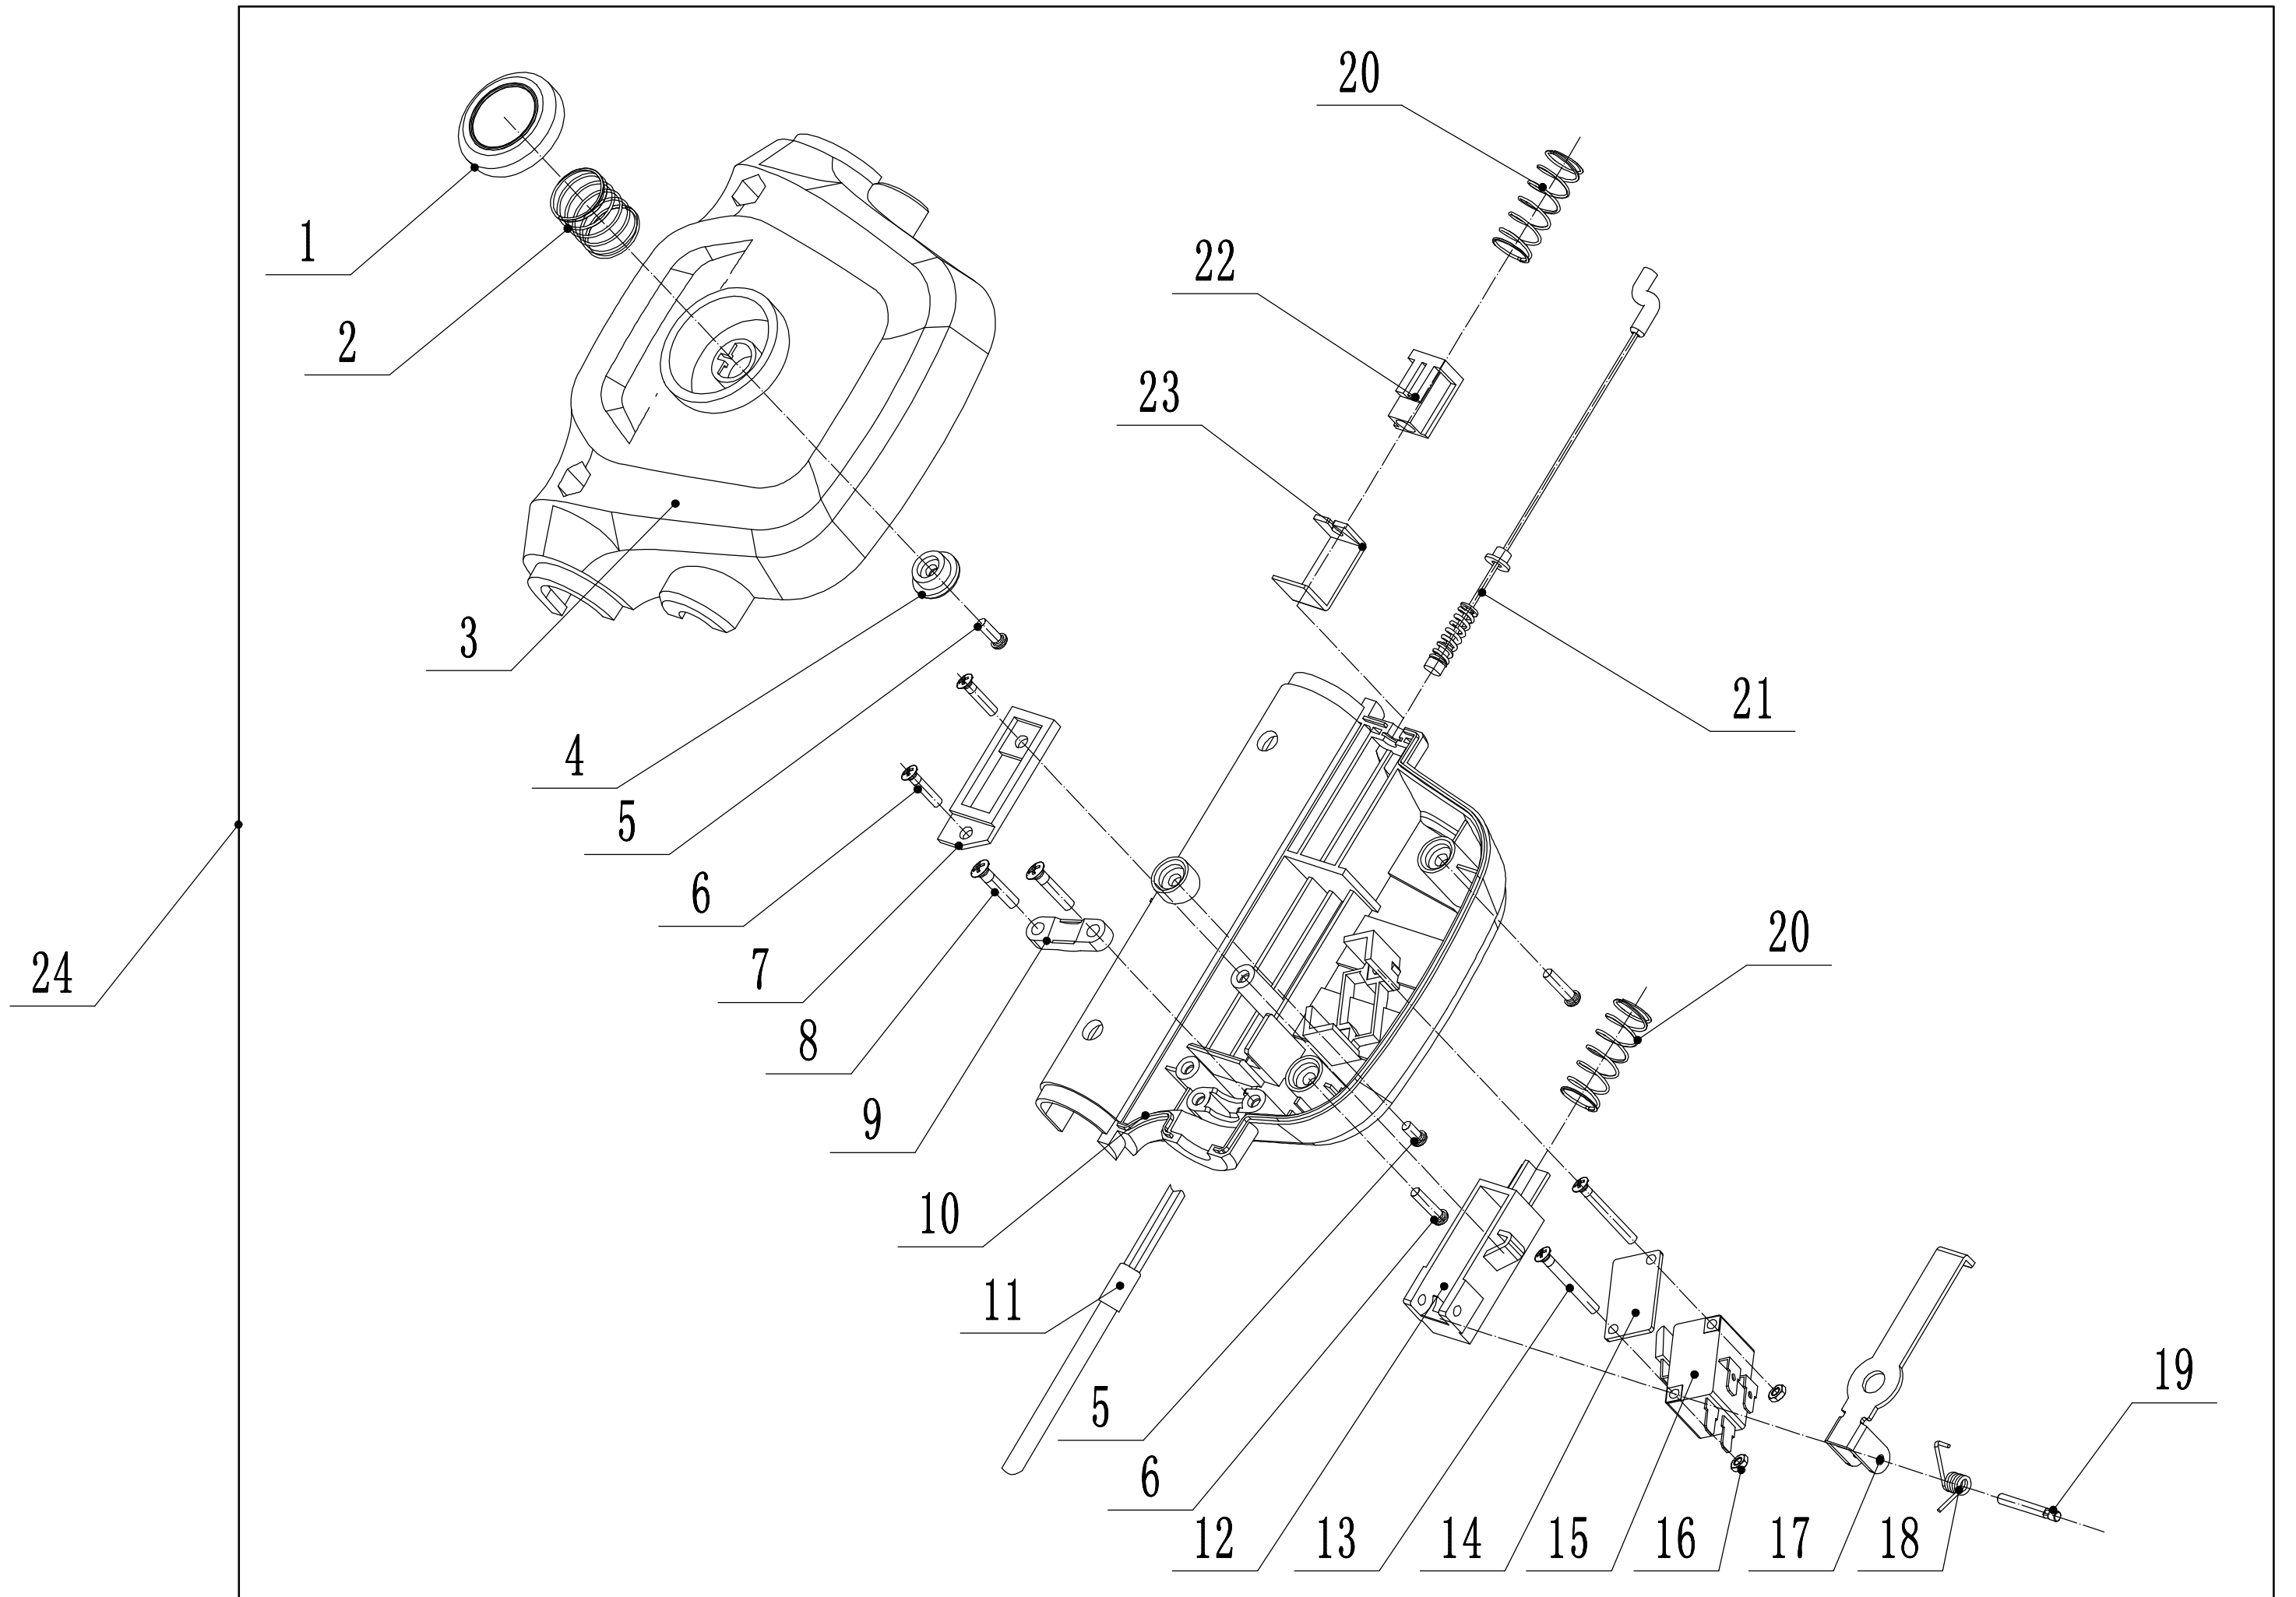

<b>switch box</b>			
<b>n</b>	<b>art</b>	<b>name</b>	<b>qty</b>
1	U50I-00046	Switch button	1
2	U50I-00047	Spring1	1
3	U50I-00048	Upper cover	1
4	U50I-00049	Pressure sleeve	1
5	U50I-00050	Screw - PT3*12	1
6	UR810-00051	Screw - PT3*16	4
7	U50I-00051	Limit block	1
8	U50I-00018	Screw - PT3.5*15	2
9	U50I-00010	Pressing block	1
10	U50I-00054	Lower cover	1
11	U50I-00055	Wire harness	1
12	U50I-00056	Trigger block	1
13	U50I-00057	Screw - M3*28	2
14	ZT107-0104	Pressure plate	1
15	U50I-00058	Micro Switch	1
16	UR200-00079	Bolt - M3	2
17	U50I-00059	Crook 1	1
18	U50I-00060	Spring	1
19	U50I-00061	Pin	1
20	U50I-00062	Spring2	2
21	U50I-00063	Cable	1
22	U50I-00064	Spring block	1
23	U50I-00065	Crook 2	1
24	U50I-00066	switch box assy	1