 
 



№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	35000F050000	Травосборник	1	14	22081F16Y010	Фиксатор вала редуктора	2
2	34080F160000	Дефлектор выброса травы назад	1	15	24211F050000	Ремень Z762	1
3	13071F16S010	Левый кронштейн крепления рукояток	1	16	11051F160000	Кожух ремня	1
4	34031F16D010	Втулки оси крышки	2	17	C5165	Нож для травы	1
5	23031T01D01A	Штифт	2	18	3/8-24UNF	Болт крепления ножа	1
6	34010F160000	Крышка отсека травосборника комплект с осью	1	19	31061T01Z010	Шайба ф52x7 мм	1
7	13081F16S010	Правый кронштейн крепления рукояток	1	20	30010T06D010	Адаптер ножа	1
8	30051T010000	Шпонка	2	21	11071T010000	Шайба адаптера	1
9	24202T00Z010	Шкив ремня	1	22	11031F160000	Передняя панель	1
10	GB/T 77	Винт крепления шкива M6x15	1	23	11035F160000	Накладка панели	1
11	10010F160000	Корпус (дека)	1	24	34100F160000	Крышка отсека выброса травы	1
12	34081F16000A	Заглушка деки	1	25	34104F160000	Направляющая бокового выброса травы	1
13	24103T01D010	Пружина фиксации редуктора	1	26	79014T010000	АКБ	1

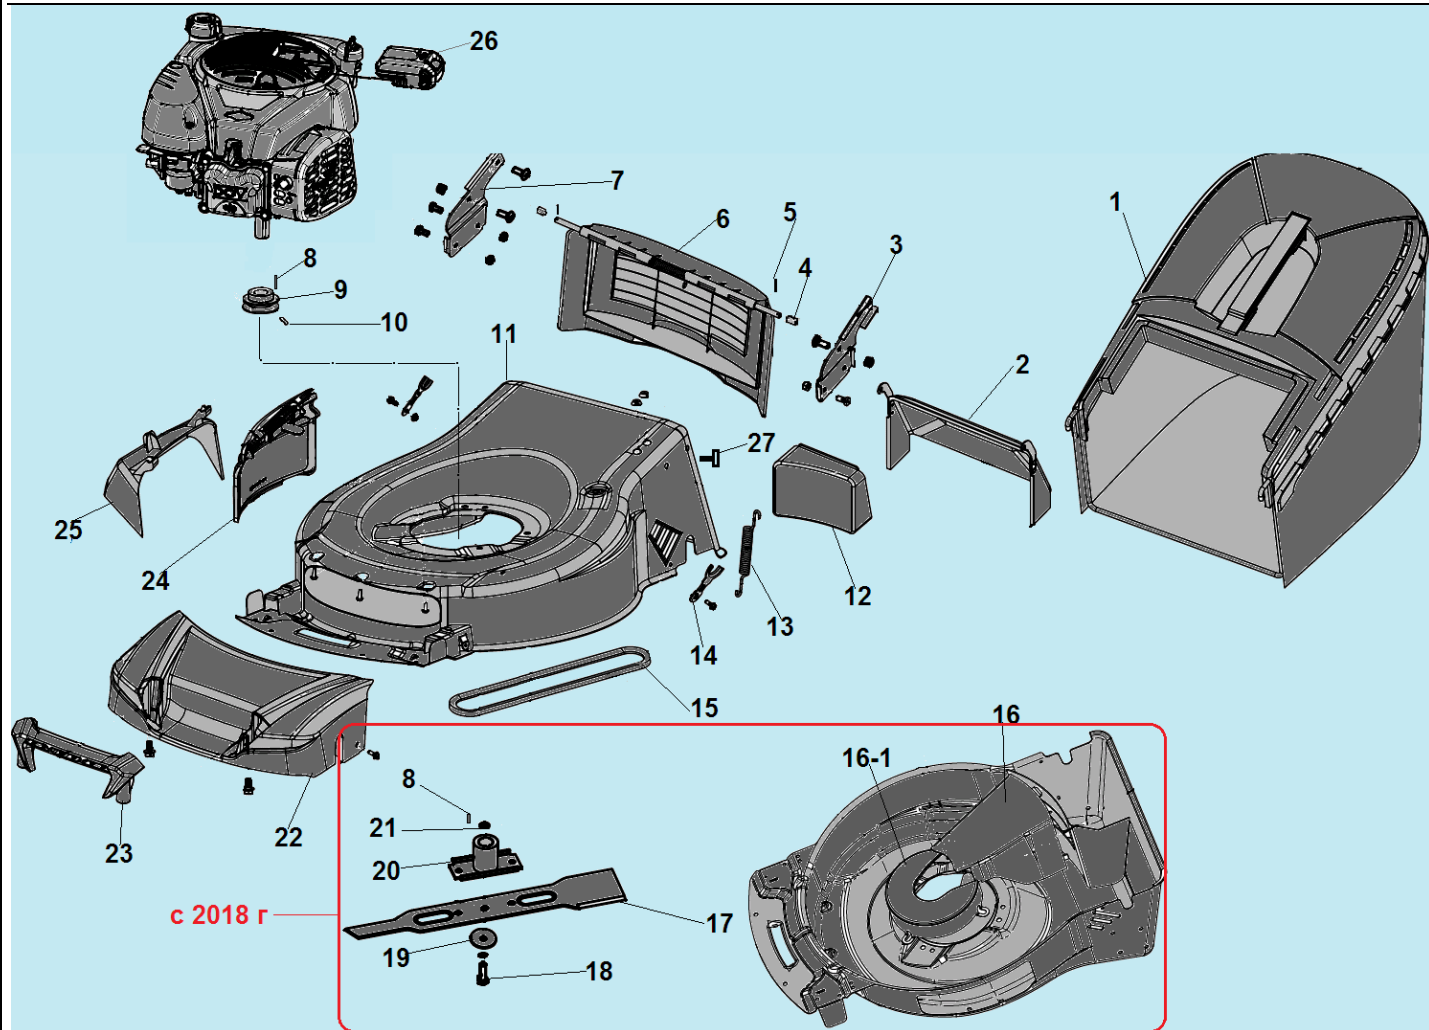


№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	35000F050000	Травосборник	1	15	24211F050000	Ремень Z762	1
2	34080F160000	Дефлектор выброса травы назад	1	16	11051F16000A	Кожух ремня (пластик)	1
3	13071F16S010	Левый кронштейн крепления	1	16-1	11050F16Y010	Кожух ремня (сталь)	1
4	34031F16D010	Втулки оси крышки	2	17	31031F16S010	Нож для травы	1
5	23031T01D01A	Штифт	2	18	3/8-24UNF	Болт крепления ножа	1
6	34010F160000	Крышка отсека травосборника	1	19	31061T01Z010	Шайба ф52x7 мм	1
7	13081F16S010	Правый кронштейн крепления	1	20	30010T02Y010	Адаптер ножа	1
8	30051T010000	Шпонка	2	21	30013T02Y010	Шайба адаптера 22,2x12,5x5 мм	1
9	24202T00Z010	Шкив ремня	1	22	11031F160000	Передняя панель	1
10	GB/T 77	Винт крепления шкива М6x15	1	23	11035F160000	Накладка панели	1
11	10010F160000	Корпус (дека)	1	24	34100F160000	Крышка отсека выброса травы	1
12	34081F16000A	Заглушка деки	1	25	34104F160000	Направляющая бокового выброса	1
13	24103T01D010	Пружина фиксации редуктора	1	26	79014T010000	АКБ	1
14	22081F16Y010	Фиксатор вала редуктора	2	27	11023F160000	Заглушка пружины фиксации редуктора	1

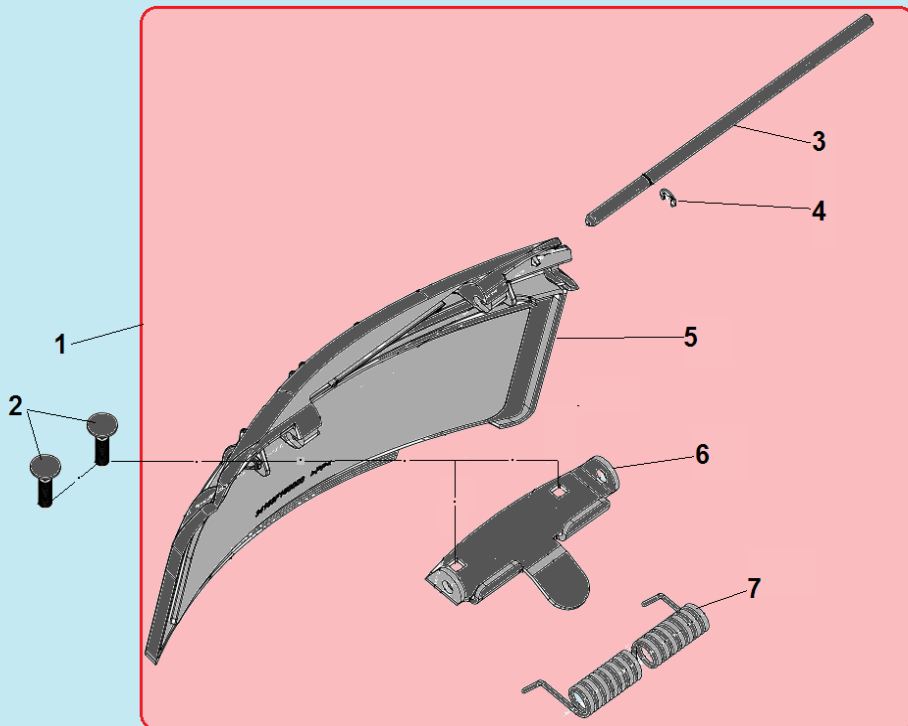


№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	34100F160000	Крышка отсека выброса травы	1	5	34103F160000	Крышка отсека выброса травы	1
2	34019F16D010	Болт М6х16	2	6	34101F16Y010	Кронштейн крепления крышки	1
3	34102F16D010	Ось крепления крышки	1	7	34105F16D010	Пружина	1
4	GB/T 896-86	Стопорная шайба	1				

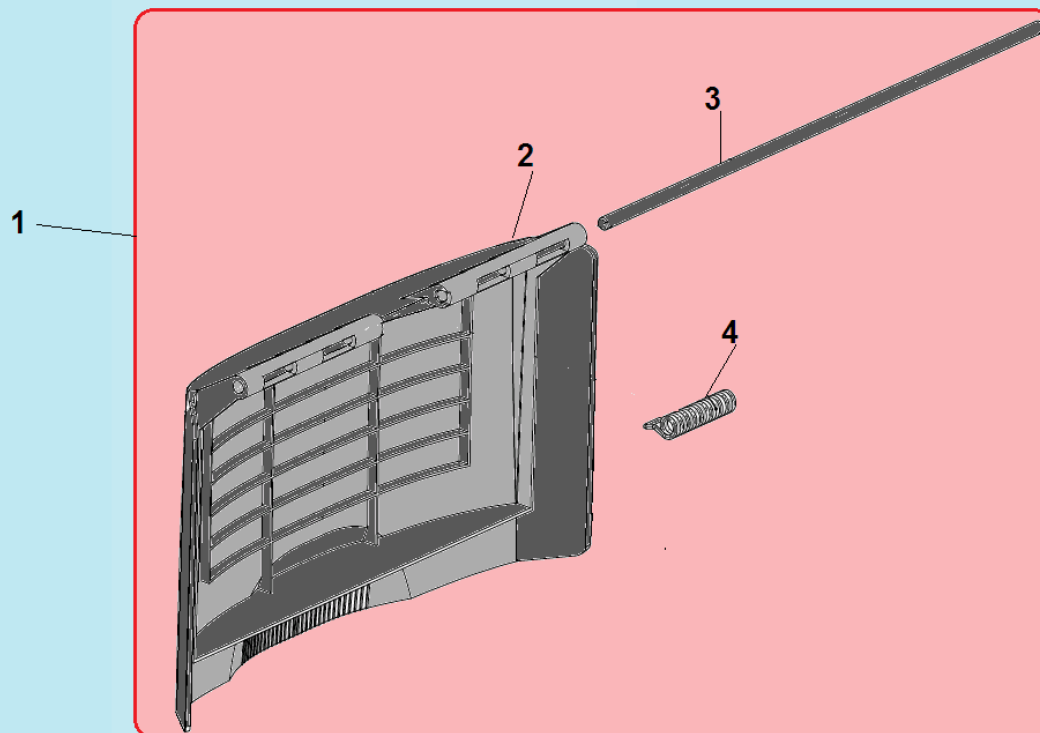 


№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	34010F160000	Крышка отсека травосборника комплект	1	3	34021F16D010	Ось крепления крышки	1
2	34011F050000	Крышка отсека травосборника	1	4	34041F05D010	Пружина	1

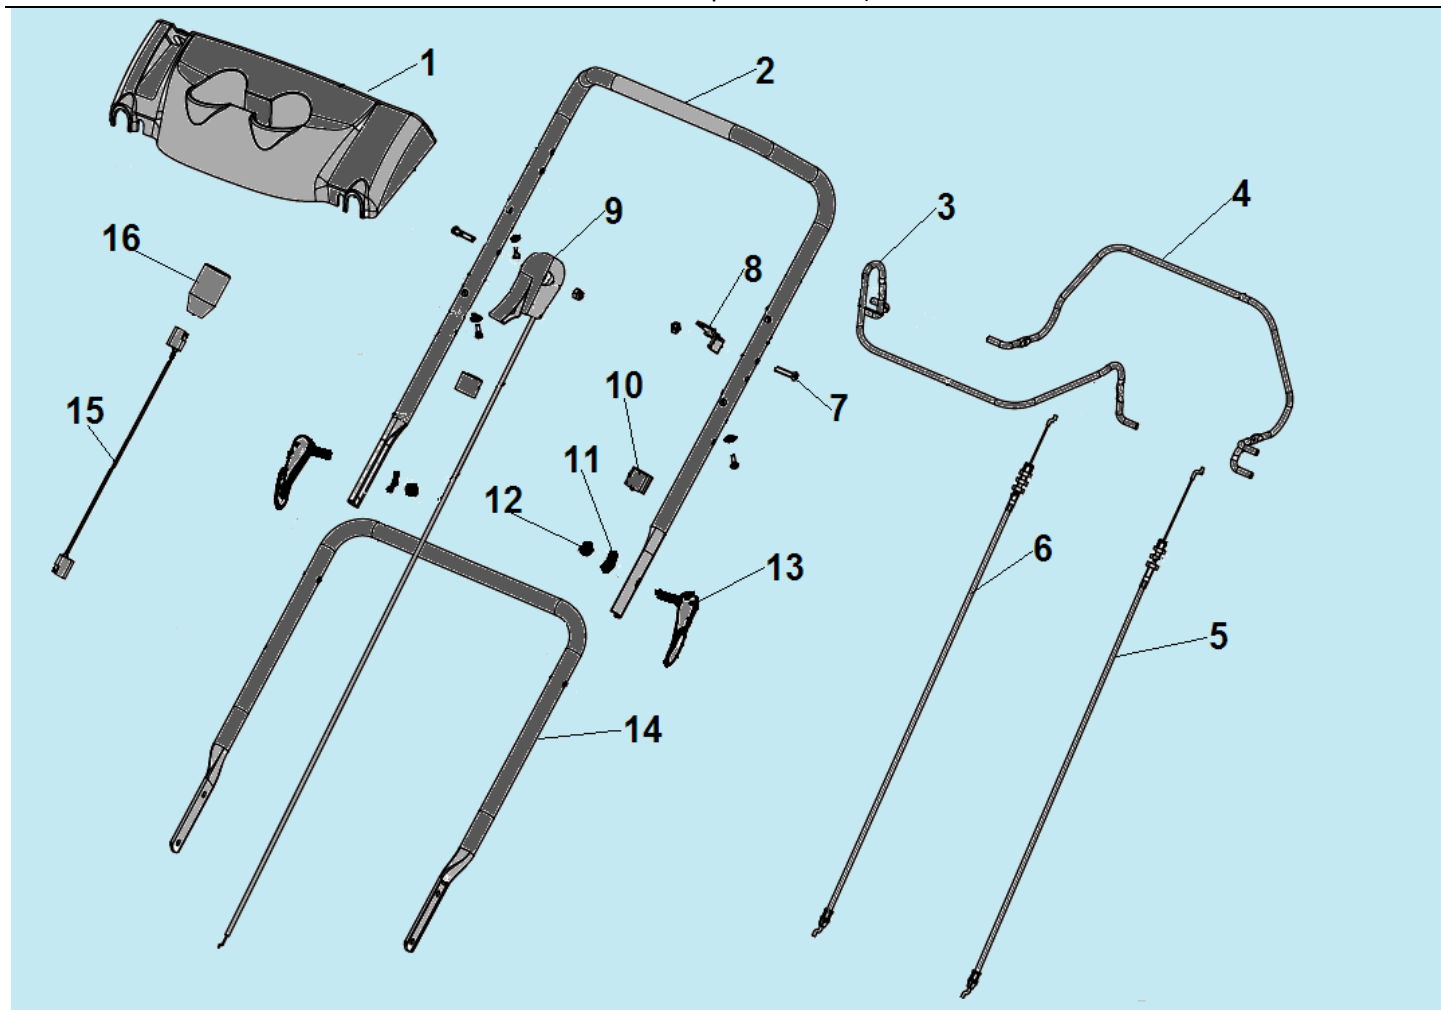 

№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	14063F160010	Декоративная панель	1	9	14061E030010	Трос газа с рычагом	1
2	13000F050000	Верхняя рабочая рукоятка	1	10	14081T020000	Хомут крепления троса	2
3	14010T03S010	Рычаг выключения двигателя	1	11	13042T01D01A	Фасонная шайба	2
4	14030T01S010	Рычаг включения хода	1	12	GB/T 6172.2	Гайка М8	2
5	14050F020010	Трос включения хода	1	13	13031C090001	Рычаг фиксатор рабочей рукоятки	2
6	14050F160000	Трос выключения двигателя	1	14	13011F02S010	Нижняя рабочая рукоятка	1
7	GB/T 818	Болт М6х30	1	15	15011T010000	Кабель пусковой кнопки	1
8	14091T01Y010	Кронштейн крепления тросов	1	16	15012F160000	Кнопка запуска двигателя	1











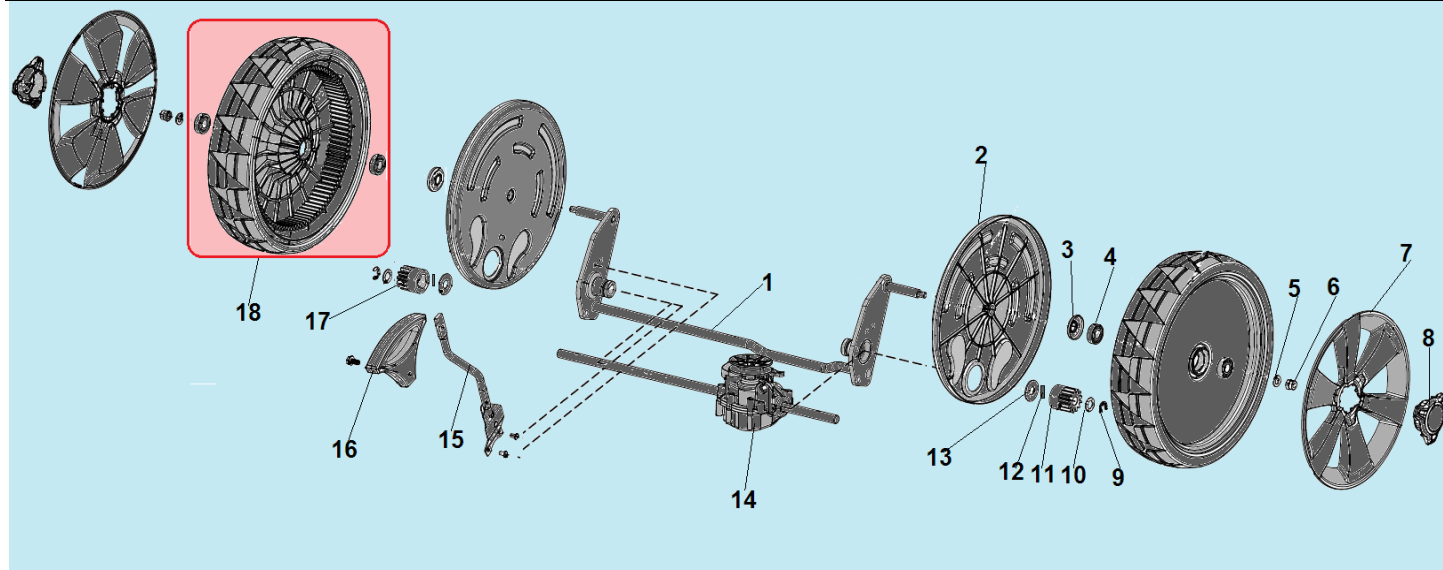 




№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	22305F180000	Ось задних колес	1	10	24007C04D010	Регулировочная шайба	2
2	20101T230000	Внутренний колпак колеса	2	11	24312T010000	Шестерня привода колеса	1
3	21053T010000	Пыльник подшипника колеса	2	12	24302T010000	Штифт	2
4	RBC-281208-ST	Подшипник колеса 6001Z	4	13	GB/T 95	Пластинчатая шайба	2
5	GB/T 95	Шайба 8x16x1,6 мм	2	14	24000F160000	Редуктор привода колес	1
6	GB/T 6172.2	Гайка M8	2	15	22220F18Y010	Рычаг регулировки высоты	1
7	20022T230000	Наружный колпак колеса	2	16	22231T010000	Ручка рычага	1
8	20021T20C010	Заглушка колпака	2	17	24311T010000	Шестерня привода колеса	1
9	24321C04Z010	Стопорная шайба	2	18	20000T230000	Заднее колесо комплект	2





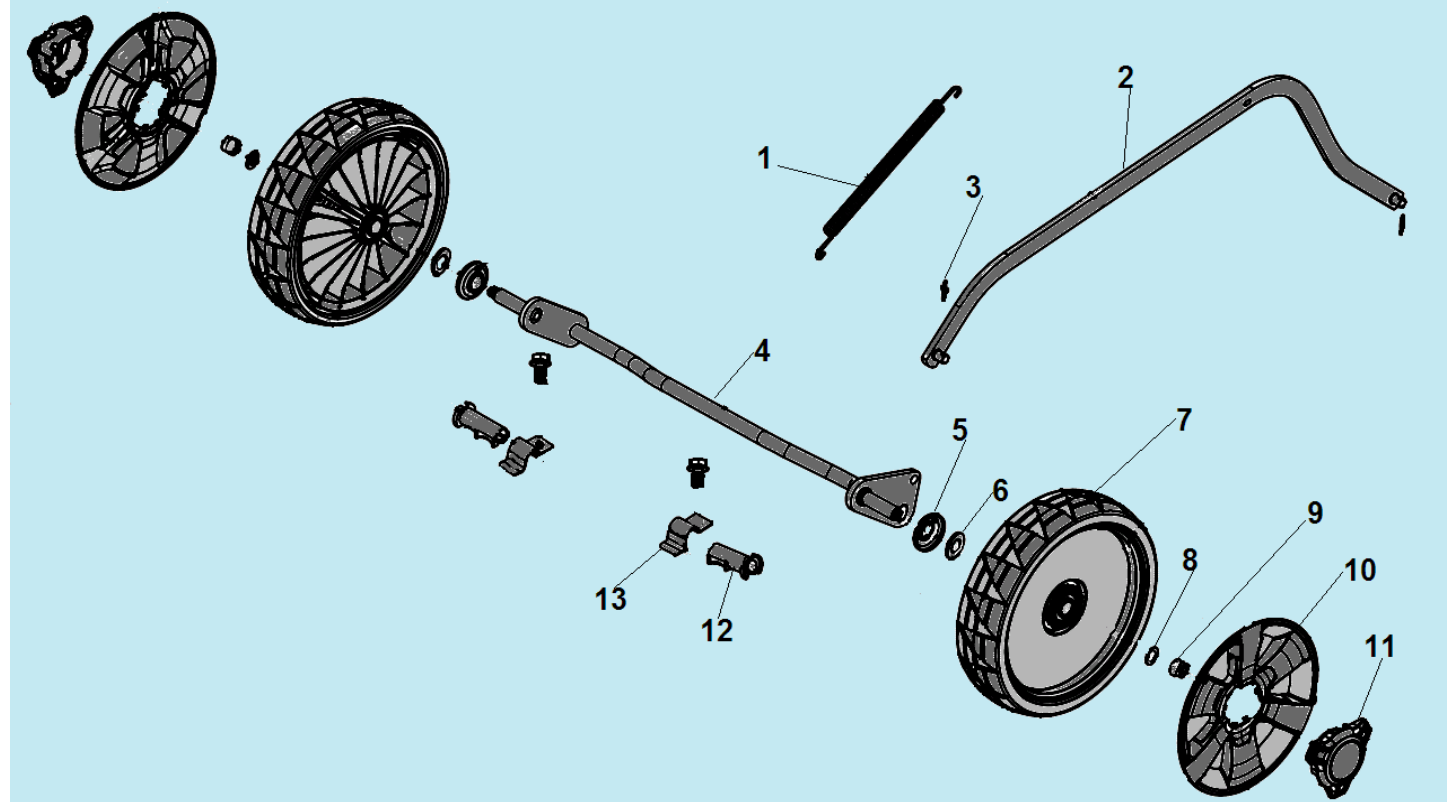 


№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	23021D07D010	Пружина тяги	1	8	GB/T 95	Шайба 8x16x1,6	2
2	23010F18S010	Тяга рычага регулировки высоты колес	1	9	GB/T 6172.2	Гайка М8	2
3	23031T01D01A	Шплинт	2	10	20021T210000	Колпак переднего колеса	2
4	21010F160000	Ось передних колес	1	11	20021T20C010	Заглушка колпака	2
5	21053T010000	Пыльник	2	12	CH86825AW	Вкладыш крепления оси	2
6	GB/T 95	Шайба 13x25x1	2	13	CH83964BW	Кронштейн крепления оси	2
7	20050T200000	Переднее колесо комплект	2	14			

                  
104M00

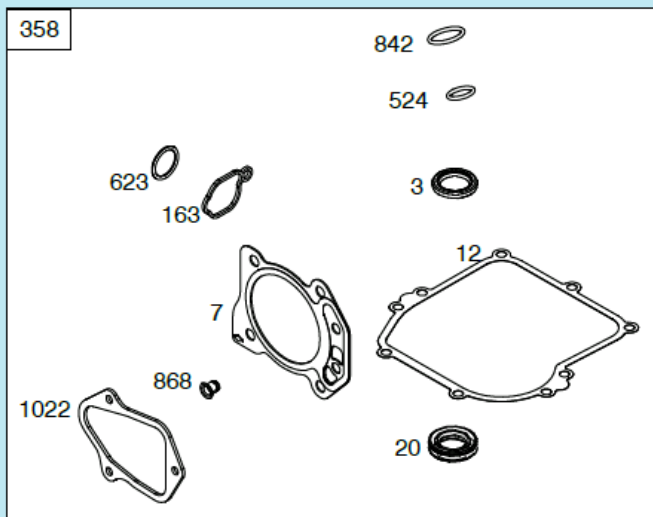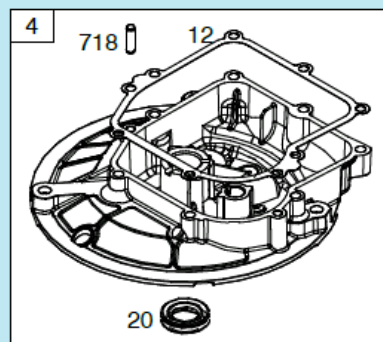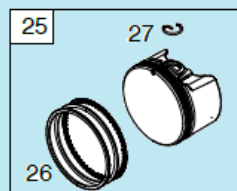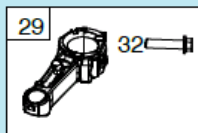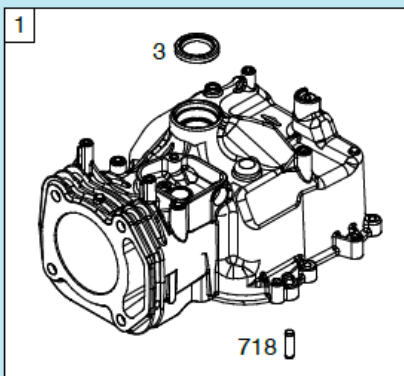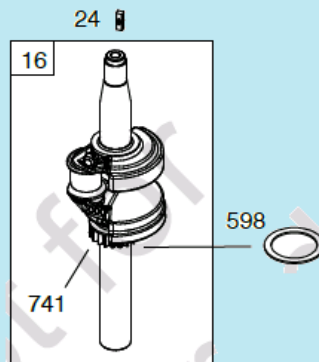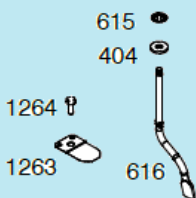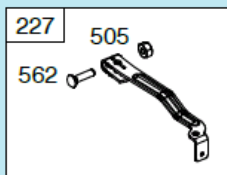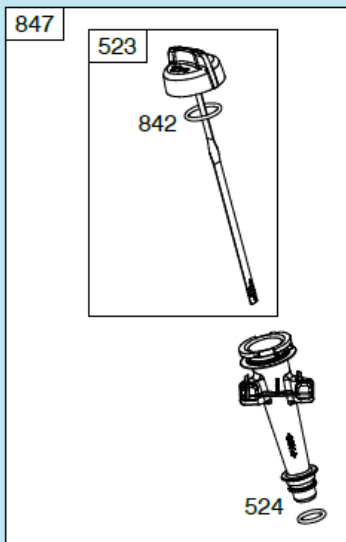

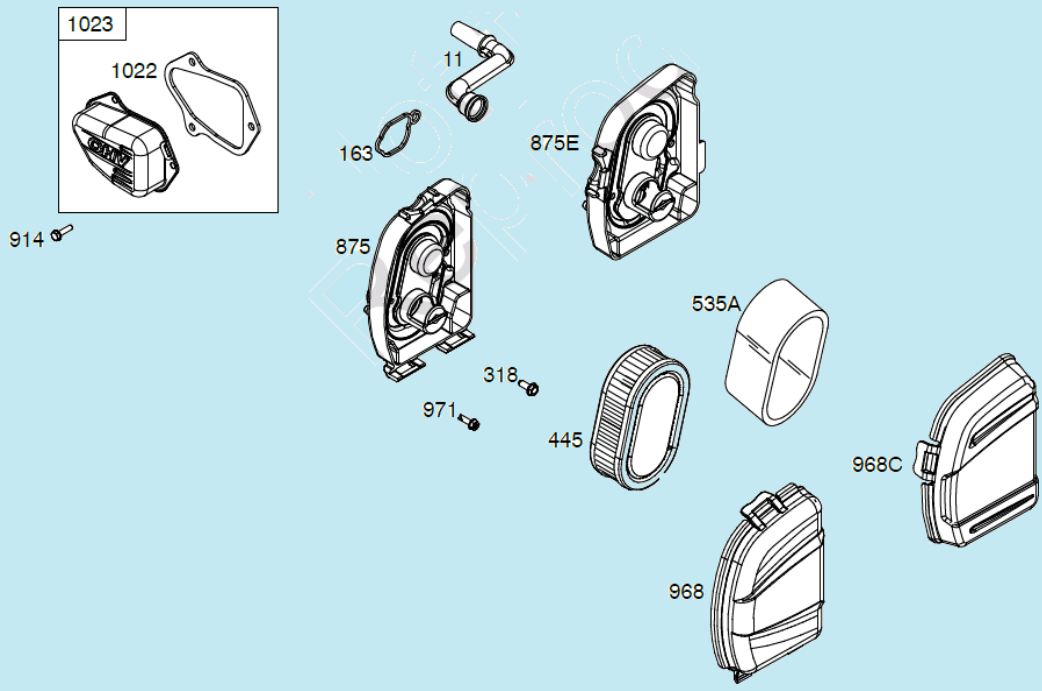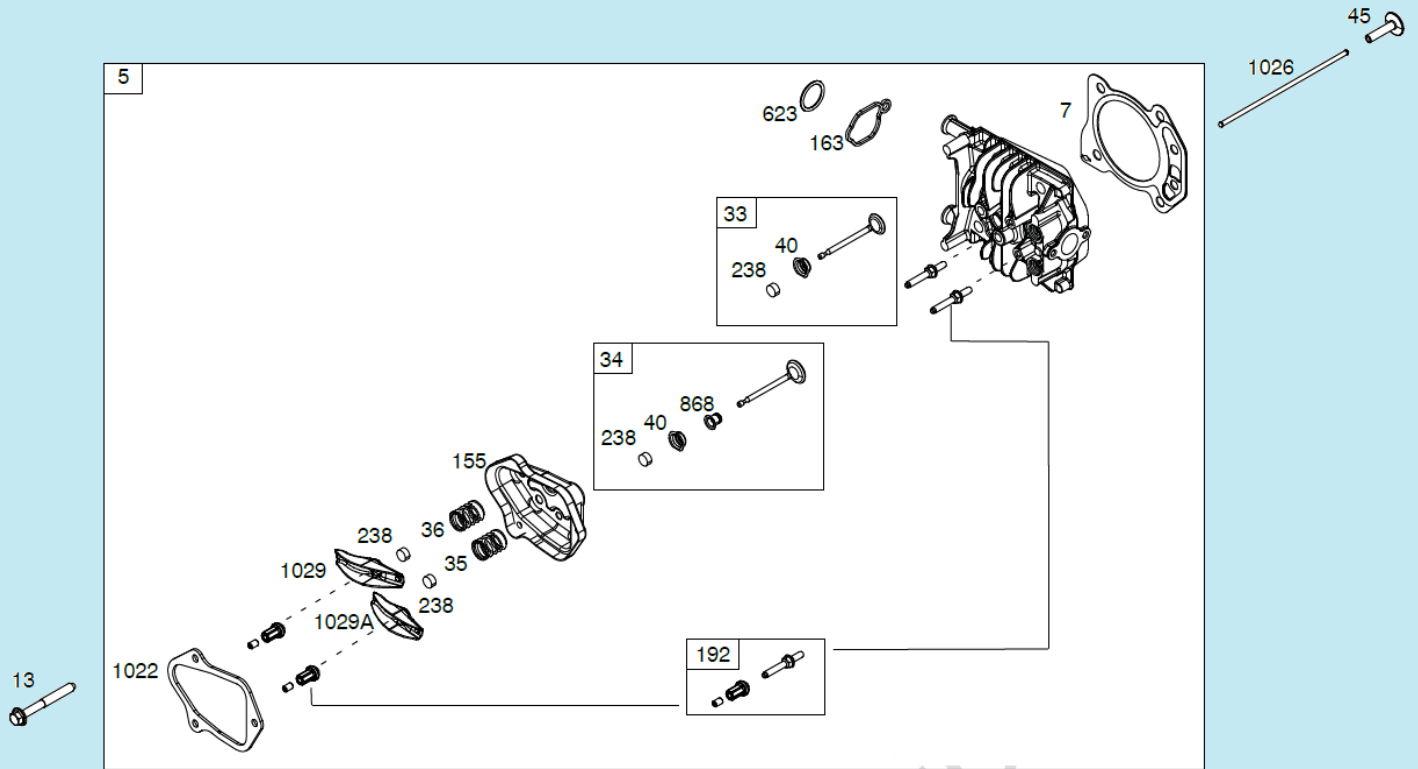


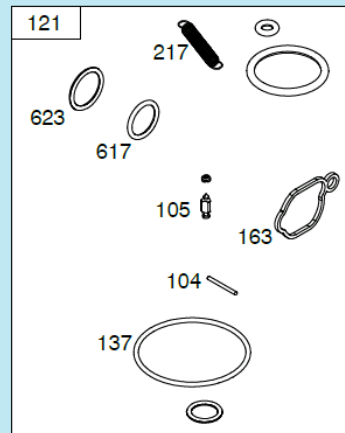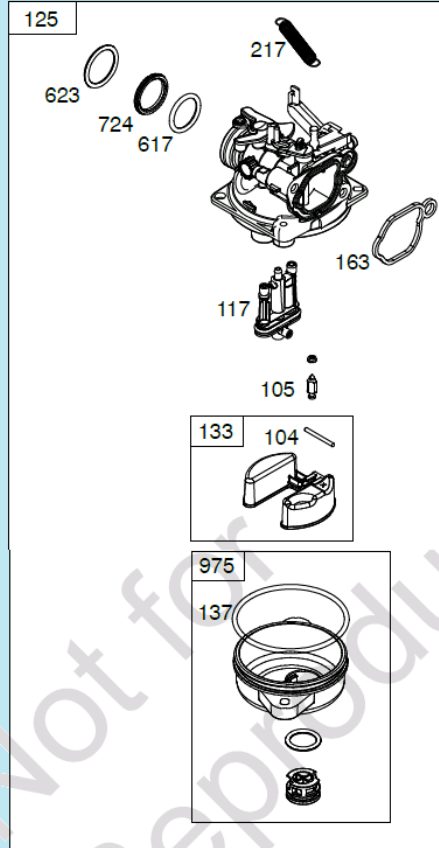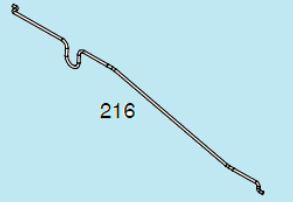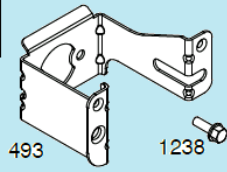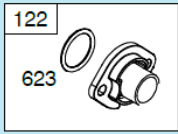



972A

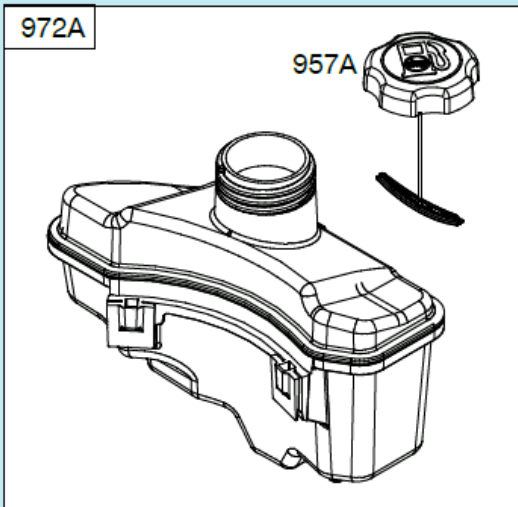 



972B









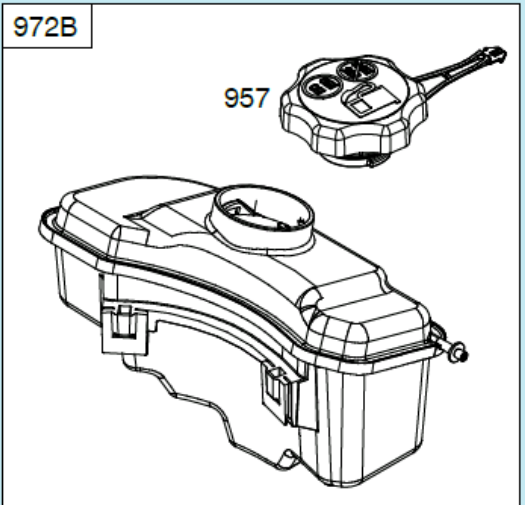 


187

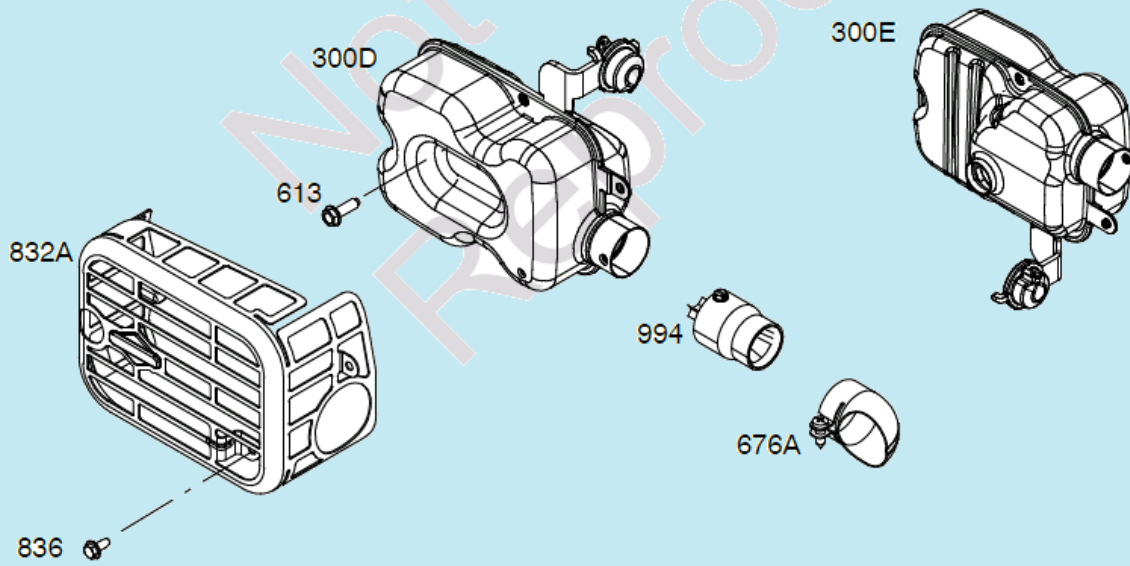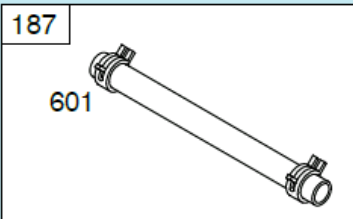  

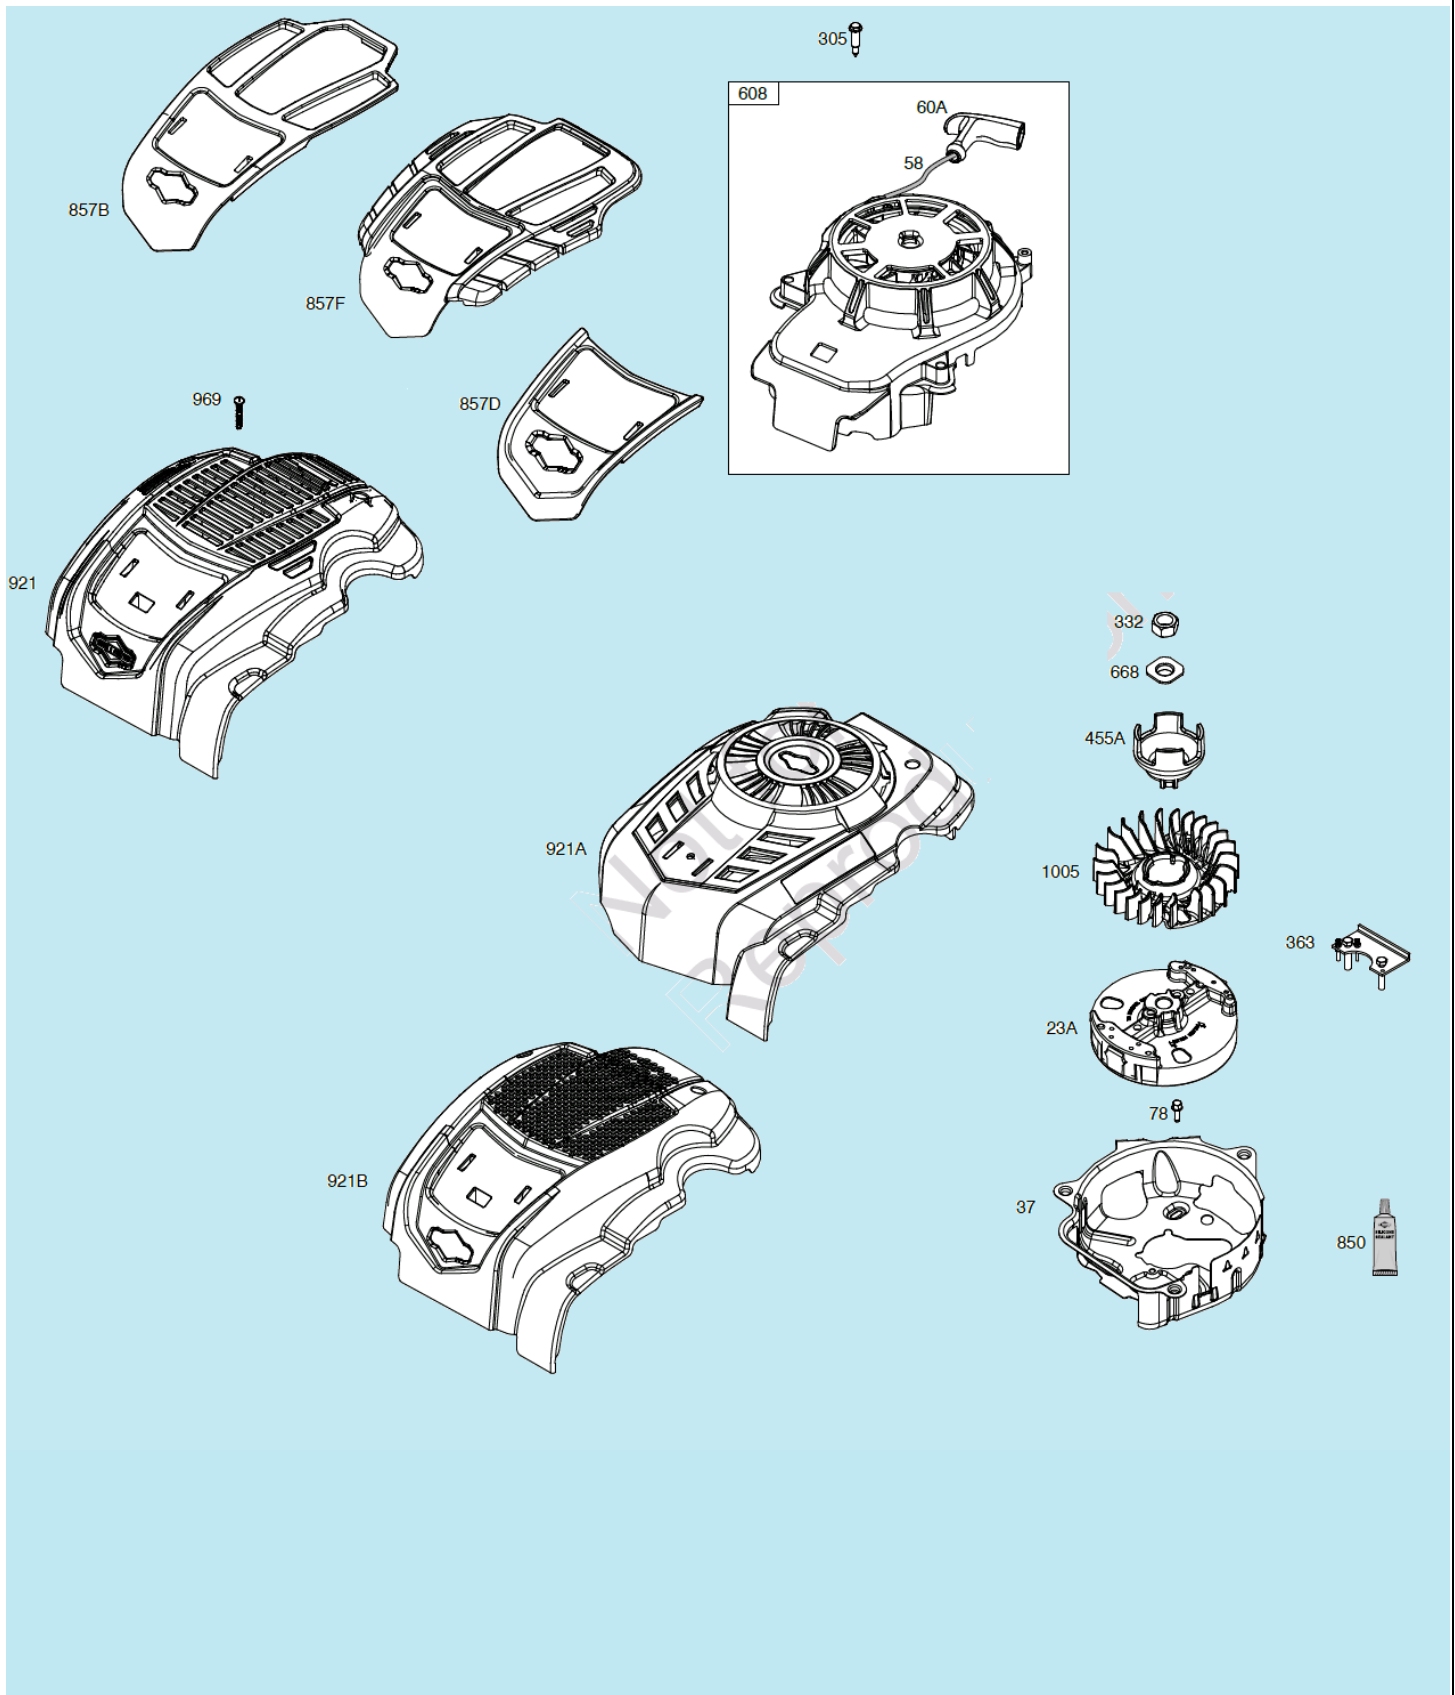 

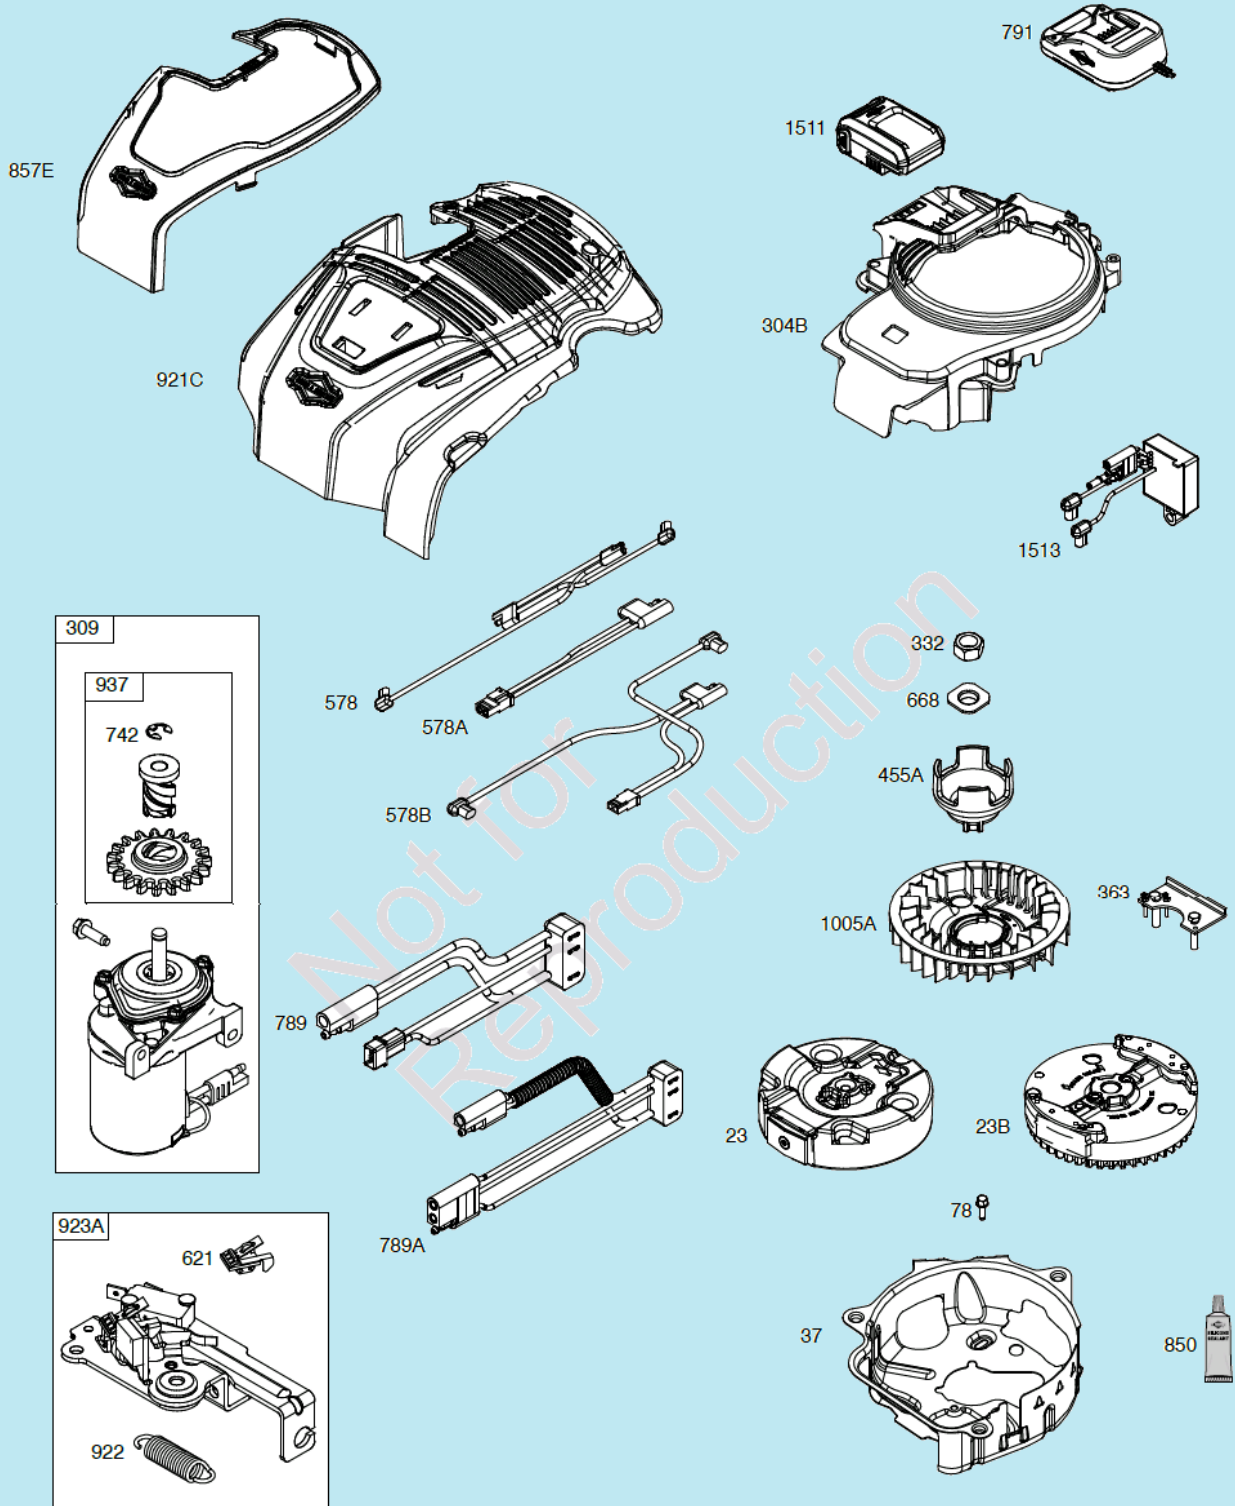 

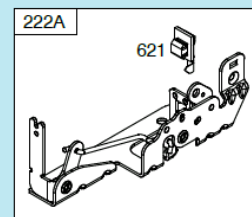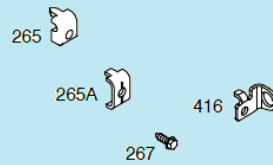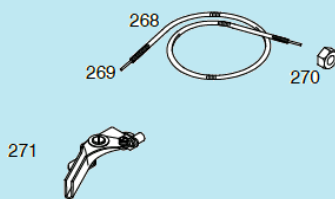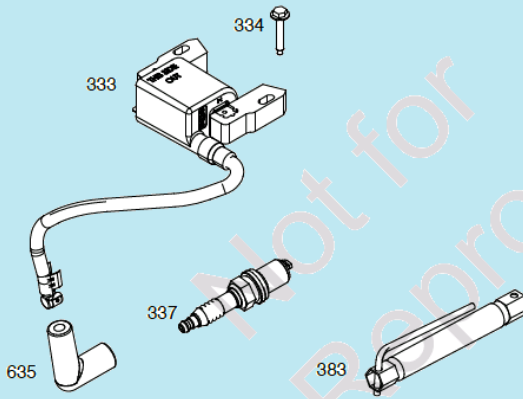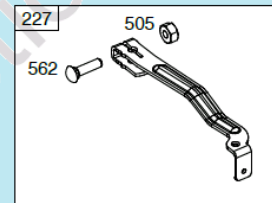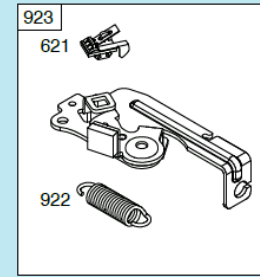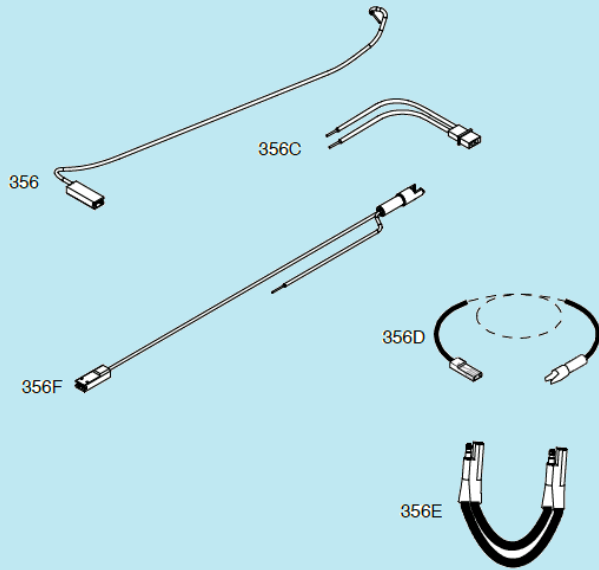         

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	594100	Cylinder Assembly ----- Note ----- 595179 Cylinder Assembly Used on Type No(s). 0023, 0024, 0026, 0032, 0037, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0087, 0090, 0091, 0093, 0099, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117.		595024	Crankshaft Used on Type No(s). 0017, 0021, 0034, 0036, 0044, 0046, 0048, 0054, 0061, 0062, 0068, 0070, 0077, 0080, 0081, 0088, 0091, 0092, 0098, 0104, 0105, 0106, 0108, 0109, 0110. 595241 Crankshaft Used on Type No(s). 0022, 0023, 0031, 0069, 0078, 0116, 0117, 0118. 595177 Crankshaft Used on Type No(s). 0039, 0052, 0083.	37	594103	Guard- Flywheel ----- Note ----- 594573 Guard- Flywheel Used on Type No(s). 0014, 0015, 0016, 0017, 0039, 0044, 0052, 0055, 0060, 0070, 0083, 0085, 0094, 0095, 0097, 0098, 0102, 0112. 595188 Guard- Flywheel Used on Type No(s). 0023, 0024, 0026, 0032, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0090, 0091, 0093, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117. 595189 Guard- Flywheel Used on Type No(s). 0037, 0087, 0099.
3	299819s	Seal- Oil (Magneto Side)	20	399781s	Seal- Oil (PTO Side)	40	594092	Retainer- Valve
4	594101	Sump- Engine	22	692551	Screw (Crankcase Cover/Sump)	43	697799	Slinger- Governor/Oil ----- Note ----- 594560 Slinger- Governor/Oil Used on Type No(s). 0012, 0016, 0024, 0053, 0055, 0060, 0074, 0095, 0096, 0115.
5	594091	Head- Cylinder	22A	590763	Screw (Crankcase Cover/Sump)	45	590514	Tappet- Valve
7	592358	Gasket- Cylinder Head	23	595185	Flywheel	46	594090	Camshaft
11	590522	Tube- Breather	23A	594054	Flywheel	58	591108	Rope- Starter
12	799587	Gasket- Crankcase	23B	595183	Flywheel	60A	281434s	Grip- Starter Rope
13	590512	Screw (Cylinder Head)	24	222698s	Key- Flywheel	78	793480	Screw (Flywheel Guard)
16	594104	Crankshaft ----- Note ----- 594507 Crankshaft Used on Type No(s). 0010, 0028, 0040, 0043, 0051, 0056, 0082. 594572 Crankshaft Used on Type No(s). 0014, 0016, 0024, 0029, 0030, 0031, 0032, 0033, 0035, 0037, 0045, 0047, 0049, 0050, 0055, 0063, 0064, 0075, 0076, 0079, 0094, 0112.	25	594099	Piston Assembly (Standard)	104	590558	Pin- Float Hinge
			26	594098	Ring Set (Standard)	105	594581	Valve- Float Needle ----- Note ----- 698537 Valve- Float Needle Used on Type No(s). 0060.
			27	691588	Lock- Piston Pin			
			28	298909	Pin- Piston			
			29	594089	Rod- Connecting			
			32	691664	Screw (Connecting Rod)			
			33	594095	Valve- Exhaust			
			34	594094	Valve- Intake			
			35	590532	Spring- Valve (Intake)			
			36	590532	Spring- Valve (Exhaust)			

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	594060	Jet- Main (Standard) ----- Note ----- 594558 Jet- Main (Standard) (Used After Code Date 00160403.) Used on Type No(s). 0074. 594060 Jet- Main (Standard) (Used Before Code Date 00160404.) Used on Type No(s). 0074.			594559 Jet- Main (High Altitude) (Used After Code Date 00160403.) Used on Type No(s). 0074. 594063 Jet- Main (High Altitude) (Used Before Code Date 00160404.) Used on Type No(s). 0074.	122	590549	Spacer- Carburetor
		594558 Jet- Main (Standard) Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 595011 Jet- Main (Standard) Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118.			594559 Jet- Main (High Altitude) Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 595015 Jet- Main (High Altitude) Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118.	125	594058	Carburetor ----- Note ----- 594529 Carburetor (Used After Code Date 00160403.) Used on Type No(s). 0074. 594058 Carburetor (Used Before Code Date 00160404.) Used on Type No(s). 0074.
118	594063	Jet- Main (High Altitude) ----- Note -----	121	590589	Kit- Carburetor Overhaul (Used Before Code Date 15030900.) ----- Note ----- 594636 Kit- Carburetor Overhaul (Used After Code Date 15030800.)			594529 Carburetor Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 594926 Carburetor Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118. 595192 Carburetor Used on Type No(s). 0060.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
133	591120	Float- Carburetor		590539	Spring- Governor	267	691044	Screw (Casing Clamp)		
137	593235	Gasket- Float Bowl (Pack of 5) (Used Before Code Date 15030900)			Used on Type No(s). 0024, 0029, 0031, 0032, 0041, 0042, 0043, 0051, 0052, 0068, 0076, 0077, 0080, 0081, 0091, 0092, 0104, 0105, 0106, 0110.			----- Note ----- 692577 Screw (Casing Clamp) Used on Type No(s). 0017, 0018, 0019, 0044, 0086, 0089, 0090, 0096, 0113, 0114.		
		----- Note ----- 594633 Gasket- Float Bowl (Pack of 5) (Used After Code Date 15030800)		590542	Spring- Governor			799013 Screw (Casing Clamp) Used on Type No(s). 0014, 0016.		
155	594093	Plate- Cylinder Head			Used on Type No(s). 0056, 0070, 0097, 0098.	268	691025	Casing- Control Wire (Cut To Required Length)		
163	799580	Gasket- Air Cleaner		595176	Spring- Governor			269	691026	Wire- Control (Cut To Required Length)
187	791766	Line- Fuel (Cut To Required Length)			Used on Type No(s). 0060.			270	691027	Nut (Control Wire Casing)
188	793480	Screw (Control Bracket)		591497	Spring- Governor			271	691028	Lever- Control
192	590535	Adjuster- Rocker Arm			Used on Type No(s). 0010, 0112.	300D	594108	Muffler		
202	590517	Link- Mechanical Governor		596099	Spring- Governor	300E	595012	Muffler		
209	590541	Spring- Governor			Used on Type No(s). 0024.	304B	595186	Housing- Blower		
		----- Note ----- 594506 Spring- Governor Used on Type No(s). 0010, 0017, 0018, 0019, 0022, 0023, 0028, 0031, 0032, 0033, 0034, 0035, 0036, 0039, 0040, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0069, 0075, 0078, 0079, 0082, 0083, 0090, 0100, 0108, 0109, 0111, 0116, 0117, 0118.	216	590547	Link- Choke	305	590586	Screw (Blower Housing)		
		594538 Spring- Governor Used on Type No(s). 0012, 0016, 0053, 0055, 0074, 0095, 0096, 0115.	217	590740	Spring- Choke Return	309	594360	Motor- Starter		
			222	590560	Bracket- Control	318	793480	Screw (Mounting Bracket)		
			222A	590561	Bracket- Control	332	690662	Nut (Flywheel)		
			227	590520	Lever- Governor Control	333	595009	Armature- Magneto		
			236	591292	Link- Lockout	334	691061	Screw (Magneto Armature)		
			238	594097	Cap- Valve					
			265	690798	Clamp- Casing					
			265A	691024	Clamp- Casing					

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	594056	Plug- Spark ----- Note ----- 491055S Plug- Spark Used on Type No(s). 0001, 0008, 0009, 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0041, 0042, 0043, 0045, 0046, 0047, 0048, 0049, 0050, 0051, 0052, 0054, 0058, 0059, 0065, 0066, 0068, 0069, 0072, 0074, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0088, 0093, 0094, 0096, 0100, 0104, 0106, 0110, 0115, 0118. 555737 Plug- Spark Used on Type No(s). 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0041, 0042, 0043, 0045, 0046, 0047, 0048, 0049, 0050, 0051, 0052, 0054, 0058, 0059, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0088, 0090, 0091, 0094, 0096, 0100, 0104, 0105, 0106, 0110, 0111, 0116, 0117, 0118. 792015 Plug- Spark Used on Type No(s). 0017, 0024, 0033, 0034, 0035, 0036, 0044, 0056, 0061, 0062, 0063, 0064, 0070, 0090, 0091, 0092, 0105, 0108, 0109, 0111, 0112, 0116, 0117.	356	595018	Wire- Stop ----- Note ----- 692390 Wire- Stop Used on Type No(s). 0014, 0015, 0016, 0017, 0037, 0044, 0055, 0070, 0085, 0087, 0094, 0095, 0097, 0098, 0099, 0102, 0112. 356C 796798 Wire- Stop Used on Type No(s). 0090, 0113, 0114. ----- Note ----- 596036 Wire- Stop Used on Type No(s). 0012, 0018, 0019, 0086, 0089, 0096. 356D 595379 Wire- Stop 356E 596100 Wire- Stop 356F 595383 Wire- Stop 358 594114 Gasket Set- Engine 363 19619 Puller- Flywheel 383 19576s Wrench- Spark Plug 404 690272 Washer (Governor Crank) 416 595196 Bracket- Throttle Cable 445 593260 Filter- Air Cleaner Cartridge 455A 593960 Cup- Flywheel 493 593330 Bracket- Mounting (Carburetor) 505 793515 Nut (Governor Control Lever) 523 796503 Dipstick 524 691876 Seal- Dipstick Tube 535A 595191 Filter- Air Cleaner Foam 562 793514 Bolt (Governor Control Lever) 578 595181 Wire Assembly 578A 595381 Wire Assembly 578B 594368 Wire Assembly 598 592587 Shim- End Play (Crankshaft or Camshaft Bearing)	601	791850	Clamp- Hose 608 594062 Starter- Rewind 613 590562 Screw (Muffler) 615 690340 Retainer- Governor Shaft 616 590516 Crank- Governor 617 270344s Seal- O Ring (Intake Manifold) 621 692310 Switch- Stop 623 799581 Seal- O Ring (Carburetor Spacer) 635 692076 Boot- Spark Plug 668 590546 Spacer (Flywheel) 676A 594563 Deflector- Muffler 718 690959 Pin- Locating (Crankcase Cover/Sump) 724 697478 Retainer- Seal 741 594105 Gear- Timing (Plastic) 742 93941 Retainer- E Ring 745 691146 Screw (Brake) 745A 690859 Screw (Brake) 789 595197 Harness- Wiring 789A 595380 Harness- Wiring 791 593561 Charger- Battery (Instart) (North America) ----- Note ----- 593562 Charger- Battery (Instart) (Europe) 593576 Charger- Battery (Instart) (United Kingdom) 595887 Charger- Battery (Instart) (Australia) 832A 594109 Guard- Muffler 836 690661 Screw (Muffler Guard) 842 691031 Seal- O Ring (Dipstick Tube)

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	594110	Dipstick/Tube Assembly	971	590552	Screw (Air Cleaner Base to Carburetor/Throttle Body)	1029A	590527	Arm- Rocker (Intake)
850	100106	Sealant- Liquid				1036		Label- Emissions (Available From A Briggs & Stratton Authorized Dealer)
857B	594111	Trim- Blower Housing Cover	972A	595190	Tank- Fuel			
857D	596037	Trim- Blower Housing Cover	972B	594112	Tank- Fuel	1127	590554	Screw (Float Bowl to Carburetor Body)
857E	595207	Trim- Blower Housing Cover	975	591492	Bowl- Float (Used Before Code Date 15030900)			
		----- Note -----			----- Note -----	1238	590562	Screw (Carburetor Spacer)
		596103 Trim- Blower Housing Cover (Orange) Used on Type No(s). 0067, 0069, 0111.			594632 Bowl- Float (Used After Code Date 15030800)	1263	697124	Reed- Breather
857F	596095	Trim- Blower Housing Cover	994	594562	Arrestor- Spark	1264	793453	Screw (Breather Reed)
868	594096	Seal- Valve (Intake)	1005	594102	Fan- Flywheel	1319	794467	Label- Warning
875	594107	Base- Air Cleaner	1005A	595182	Fan- Flywheel	1319A	797669	Label- Warning
875E	594574	Base- Air Cleaner			----- Note -----	1511	593559	Battery (Instart) (North America)
914	591103	Screw (Rocker Cover)			595184 Fan- Flywheel Used on Type No(s). 0039, 0052, 0060, 0070, 0083, 0094, 0112.			----- Note -----
921	594116	Cover- Blower Housing	1022	595342	Gasket- Rocker Cover			593560 Battery (Instart) (Europe) (Australia)
921A	594550	Cover- Blower Housing	1023	595352	Cover- Rocker	1513	595382	Module- Starter
921B	595212	Cover- Blower Housing	1026	590515	Rod- Push			
921C	595180	Cover- Blower Housing	1029	590526	Arm- Rocker (Exhaust)			
922	692135	Spring- Brake						
923	691487	Brake						
923A	595195	Brake						
937	799420	Spline- Starter						
951	591104	Lever- Choke						
957	594061	Cap- Fuel Tank						
957A	595214	Cap- Fuel Tank						
968	594106	Cover- Air Cleaner						
968C	594575	Cover- Air Cleaner						
969	594115	Screw (Blower Housing Cover)						