



Valve Assembly



www.esbe.eu



SERIES ARD100/ARD200



NO.1 IN HYDRONIC SYSTEM CONTROL

Series ARD100
Series ARD200

CE

 
LVD 2006/95/EC valid until April 19th 2016

LVD 2014/35/EU valid from April 20th 2016

EMC 2004/108/EC valid until April 19th 2016

EMC 2014/30/EU valid from April 20th 2016

RoHS 2011/65/EU

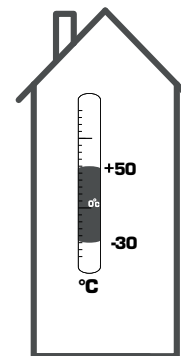

Series ARD100

 
 
 
 
 
 


Series ARD200



Series 3F, 4F




Mtrl.nr: 9814 09 62 • Ritn.nr 8473 vers. A • Rev 1512

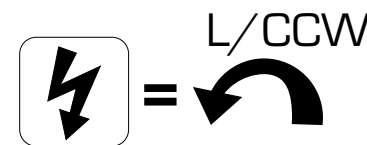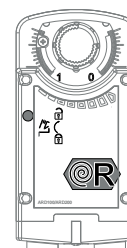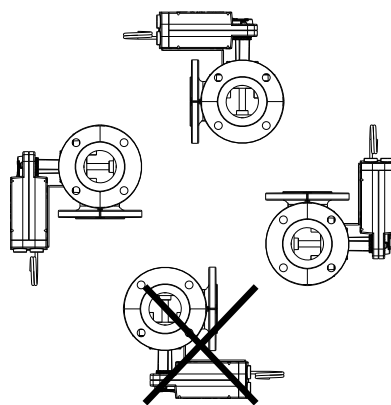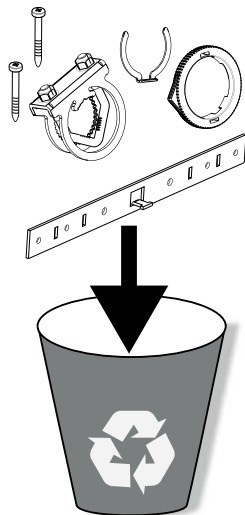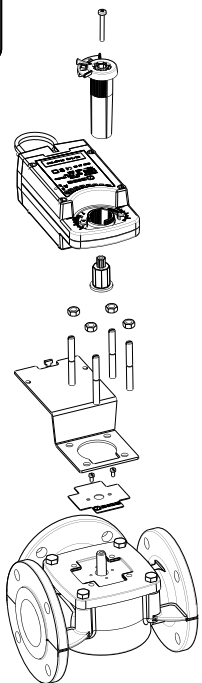

Valve settings




V 1A

   R/CW

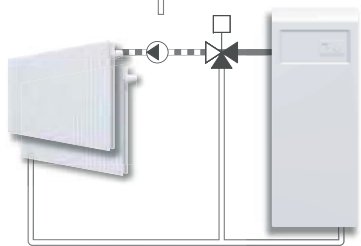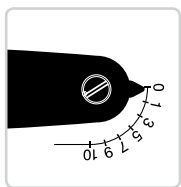




V 1B

   L/CCW

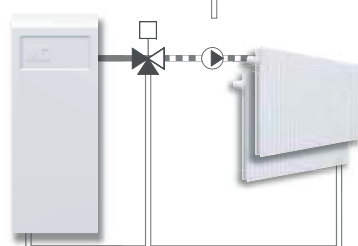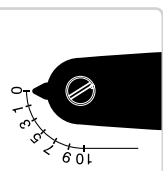




V 2A

   R/CW

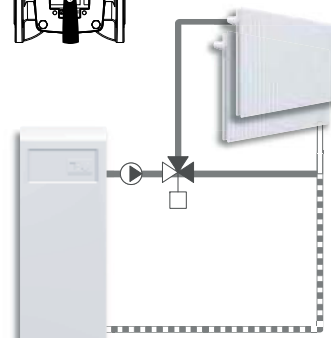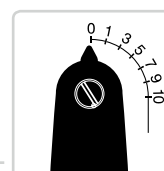

V 2B

 
 
 
L/CCW

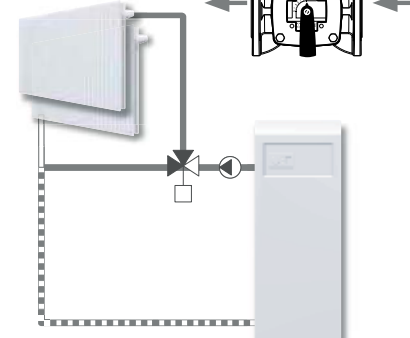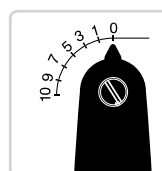

Valve settings




V 3A

   R/CW

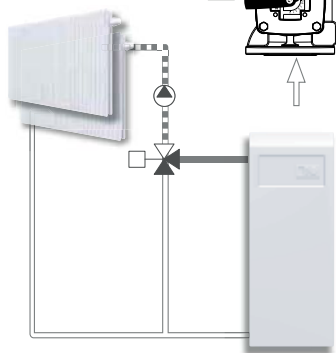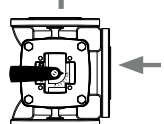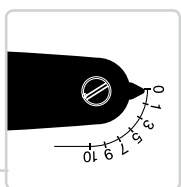




V 3B

   L/CCW

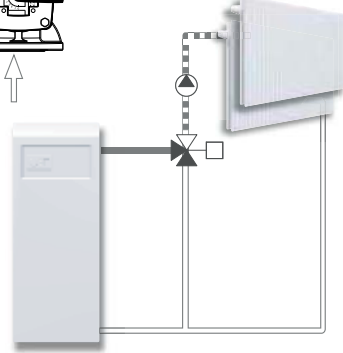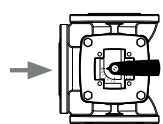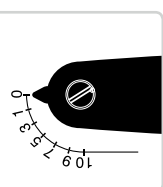




V 4A

   R/CW

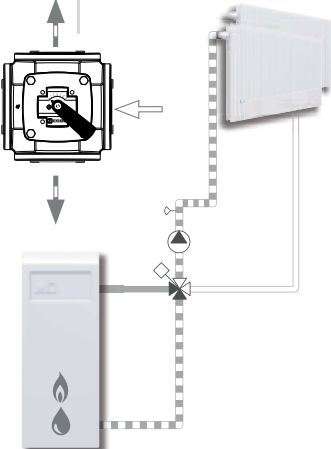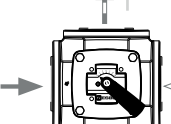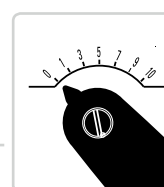


V 4B

   L/CCW

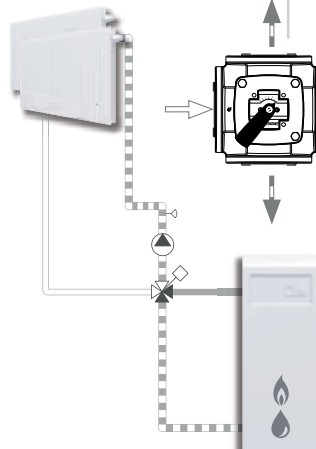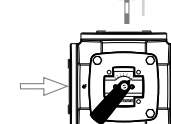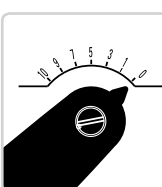


Valve Assembly

 
V 5

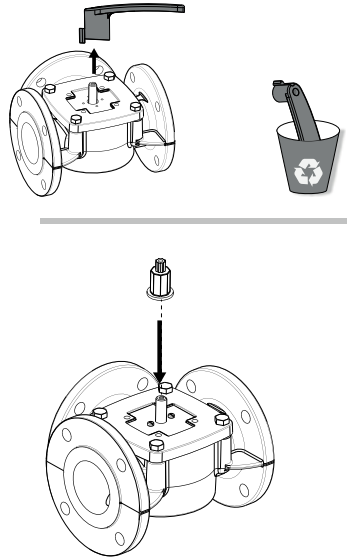


V 6

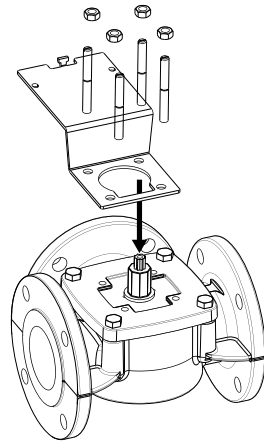 

V 7


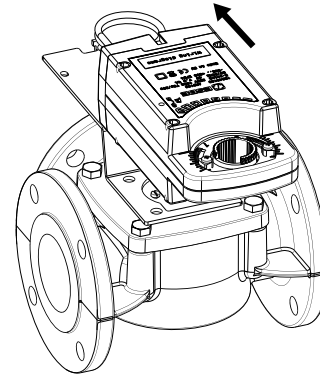 


V 8

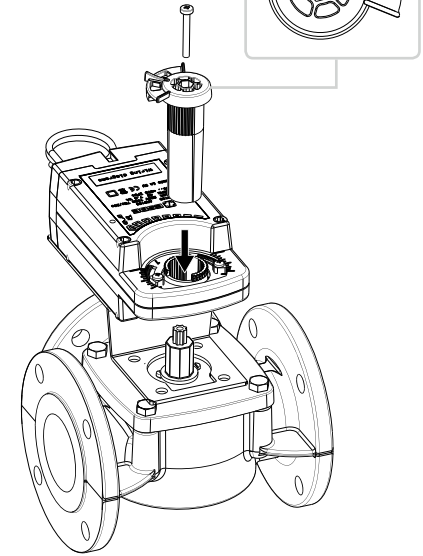 


Actuator Settings Valve Assembly

  V 9A

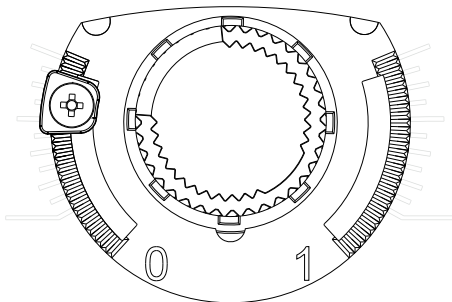


V 9B

 Limiting working range • Clockwise working direction (R/CW)

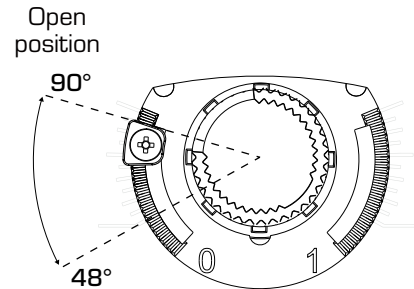

Exampel R/CW working range 0°- 75°

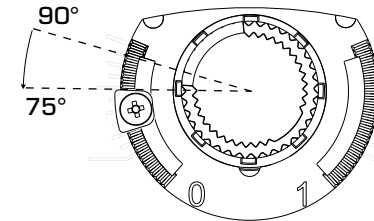 

i

 
ARD169/
ARD269
Dip Switch 4



E 3


**V
9C**

Limiting working range • Counter clockwise working direction (L/CCW)

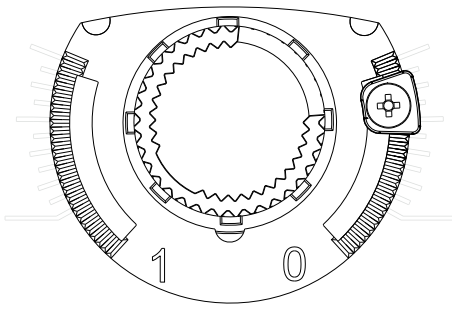


Max working range
0° - 90°

 
Min working range
0° - 48°

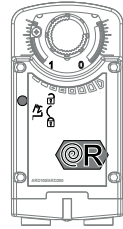

Open
position

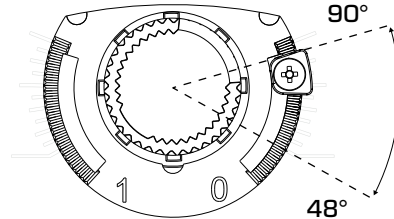 

Exempel L/CCW working range 0°- 75°

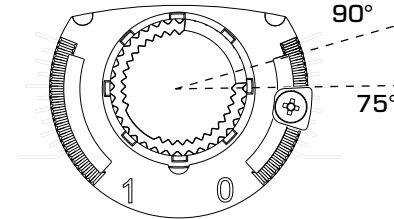 

i

ARD169/
ARD269
Dip Switch 4

 


Manual operation


**V
10A**



**V
10B**

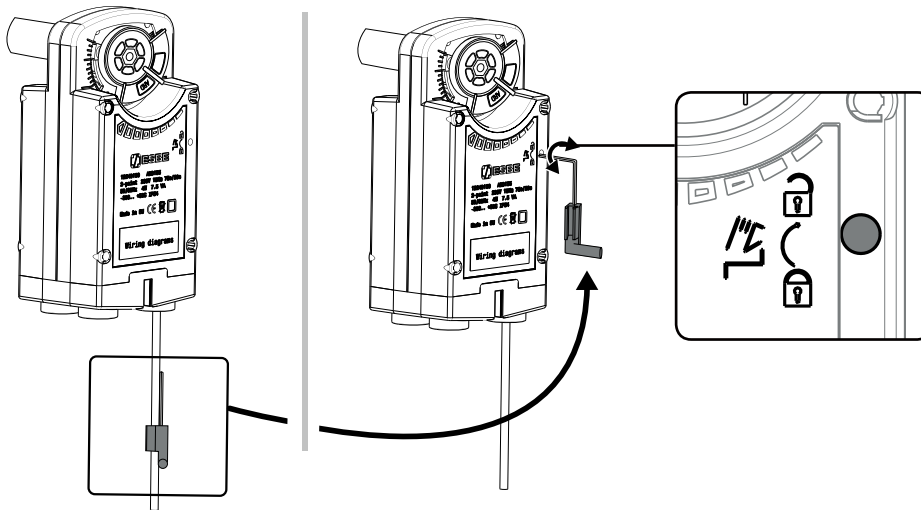

**V
10C**

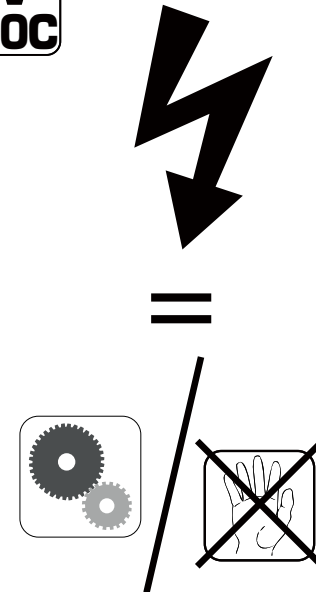 

**V
11** **i**

ARD100/ARD200
Electrical
Settings

