

Use and Maintenance

- SC400

ATTENTION! Do not use the machine before you have read and understood the User Manual



1 Disconnect the battery charger cable from the electrical main.



2. Fill the tank with a solution suitable for the work to be performed. Always follow the dilution instructions on the label of the chemical product used to prepare the solution. Its temperature must not exceed 40°C.



3. Install the squeegee and fasten it with the handwheels, then connect the vacuum hose to the squeegee.



4. Place the brush or the pad-holder under the deck. Use the appropriate brush to clean the floor.



5. Switch on the brush and vac motors to activate the machine



6. Press the handle switch to engage the brush and run the machine



7. Press the solution flow control switch as necessary, depending on the type of cleaning to be performed



8. Lower the squeegee with the lever.



9. Press the enabling push-button together with the brush levers for starting floor cleaning. If solution applied flows outside the brush housing during use, reduce the flow of solution.



10. **At the end of the work.** Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose



11. Wash with clean water the recovery tank and the vacuum grid



12. Clean the filter by: Remove the transparent cover and the gasket



13. Remove the brush/pad and clean them



14. Take the squeegee off and remove debris.



15. Check and clean the squeegee blades



16. Clean the machine using a damp cloth and where needed use a neutral cleaning product



17. Charge the batteries: Connect the battery charger cable to the electrical main



18. Park the machine with the recovery tank cover open

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.


PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Troubleshooting

- SC400

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine doesn't work as it should?

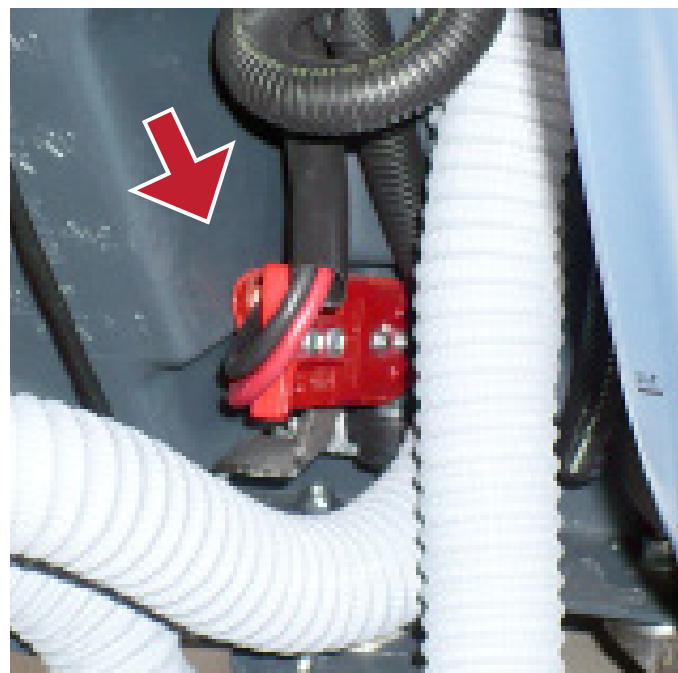


- 1 Check if the power cable is correctly connected.
- 2 Check if the battery is charged.

The suction doesn't work as it should?



- 1 Check if the suction hose is correctly installed and cleaned.
- 2 Open the recovery tank and check if the vacuum grid and gasket are cleaned.
- 3 Check if squeegee blades are damaged or dirty.
- 4 Close the recovery tank cover properly and/or verify the gasket wear.

The machine doesn't clean as it should?

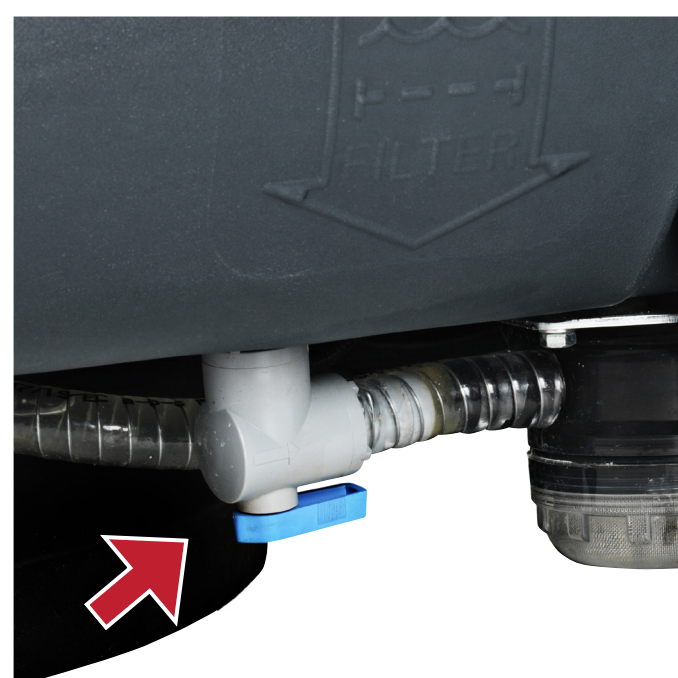

- 1 Check if you have the right water settings.
- 2 Check if the solution tap is open.
- 3 Check if the solution filter is cleaned.

The brush don't work as they should?



- 1 Check if the brush are correctly installed and not worn out.
- 2 Check if there isn't any brush motor overload i.e. 3 battery Ledflash simultaneously.
- 3 Check if there are external materials avoiding brush rotating.